

LePRESSO

LePresso Coffee Maker with Travelling Mug 450W



SKU: LPCMTMBK

Important Safeguards

Before using this electrical appliance, always adhere to the following basic precautions:

1. Thoroughly read all instructions.
2. Confirm that the voltage of your outlet matches the voltage specified on the coffee maker's rating label.
3. Avoid operating the appliance if it has a damaged cord or plug, or if it is not functioning properly. If the main cord is compromised, it must be replaced by the manufacturer, an authorized service agent, or a qualified technician.
4. Do not touch the appliance's hot surfaces; use the handles or knobs instead.
5. To guard against fire, electric shock, and injury, do not immerse the power cord or plug in water or any other liquids.
6. Remove the appliance from the wall outlet before cleaning and when it's not in use. Allow the appliance .
7. The use of accessories not recommended by the manufacturer may result in fire, electric shock, or injury.
8. The container is intended solely for use with this appliance and must not be used on a stovetop.

9. Refrain from cleaning the container with harsh cleansers, steel wool, or abrasive materials.
10. Avoid draping the power cord over the edge of a table or counter, or near a hot surface.
11. Do not place the coffee maker on or near a hot surface or an open flame to avoid damage.
12. To disconnect, remove the plug from the wall outlet by grasping the plug itself, not the cord.
13. Utilize the appliance only for its intended purpose and store it in a dry location.
14. Exercise close supervision when the appliance is used near children.
15. Be cautious of steam to prevent burns.
16. To disconnect, turn any controls to "Off" before removing the plug from the wall outlet.
17. Never operate the coffee maker without water.
18. If the ceramic jug displays any cracks, refrain from using it as it is extremely fragile.
19. Avoid setting a hot container on wet or cold surfaces.
20. Do not use a container that is cracked or has a loose or weakened handle.
21. Be aware of the potential for scalding if the cover is removed during the brewing cycles.
22. Some parts of the appliance may be hot during operation; handle only the knobs or handles.
23. Do not place a hot container on a wet or cold surface.

24. This appliance is not designed for use by persons (including children) with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, unless they are under the supervision of a responsible adult.


25. Ensure children are supervised to prevent them from playing with the appliance.

26. The appliance is designated for household use and similar environments such as shops, offices, and other work environments; in farmhouses; by clients in hotels, motels, and other residential settings; as well as in bed and breakfast establishments.

27. Do not use the appliance outdoors.

28. Retain these instructions for future reference.

Product Diagram

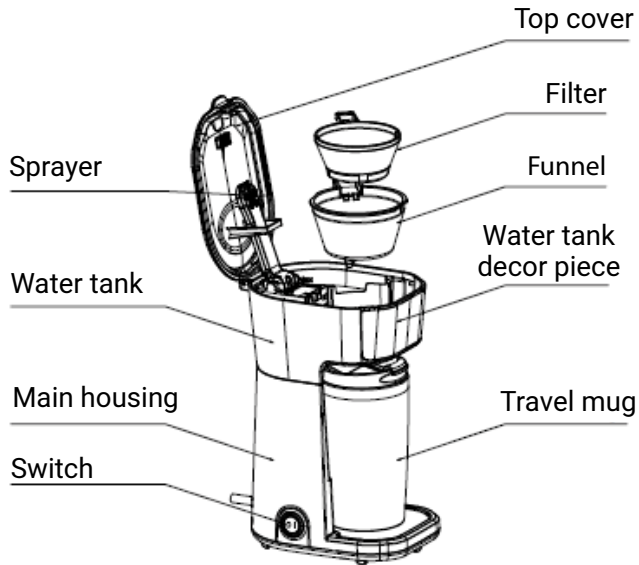

Before First Use

Ensure all accessories are accounted for and the unit is in perfect condition. Before using it with coffee powder, fill it with clean water to the maximum level and operate it several times to clean the system, then dispose of the water. Clean all detachable components with warm water.

Using Your Coffee Maker

1. Lift the top cover and pour cold drinking water into the water tank, keeping the water level at or below the MAX line as shown on the gauge.
2. Move the sprayer to the side, place the funnel into the water tank, then insert the filter in the funnel, ensuring it is correctly assembled.
3. Spoon coffee powder into the filter. Generally, one level spoonful per cup is sufficient, but adjust to taste. Replace the top cover securely.
4. Position the ceramic jug correctly on the base.
5. Connect the power cord to the electrical outlet.
6. Depress the switch to activate the unit; this will illuminate the indicator light, signaling that the coffee maker is operational.

Note: The volume of brewed coffee will be marginally less than the volume of water added due to absorption by the coffee grounds.

Avoid touching the top cover and other hot parts during and immediately after use.

7. Always switch the coffee maker off and unplug it after use.

Note: Exercise caution when dispensing coffee; the beverage will be hot immediately after brewing.

Cleaning and Maintenance

Caution: Always disconnect the appliance from the electrical outlet prior to cleaning. Do not submerge the unit or power cord in water or any liquid.

1. After each use, clean all removable parts with warm, soapy water.
2. To remove any external stains, gently wipe the coffee maker's surface with a soft, damp cloth.
3. Condensation may cause water droplets to form near the funnel and drip onto the drip plate during the brewing process. To manage this, dry the area with a clean cloth after each use.
4. For the coffee maker's body, use a slightly damp cloth to wipe it down. Abrasive cleaners should not be used.
5. After cleaning, reassemble all parts in preparation for the next use.

Removing Mineral Deposits

Routine cleaning of mineral deposits is essential for the efficiency of your coffee maker. The frequency of this maintenance depends on your local water quality and how often you use the machine. To descale your coffee maker, you can use a mixture of white vinegar and cold water:

1. Combine two tablespoons (30ml) of white vinegar with one Ceramic jug of cold water, ensuring the best results.
2. Fill the water tank with this vinegar solution up to the maximum indicated level.
3. Confirm that the Ceramic jug and filter (without coffee powder) are correctly positioned.
4. Turn on the appliance to start the descaling cycle with the vinegar solution.
5. Once the cycle is complete, turn off the coffee maker.
6. Allow the descaling solution to sit in the appliance for 15 minutes, then proceed with steps 3-5.
7. Activate the appliance to flush the solution through until the water tank is empty.
8. Conclude the descaling process by running the appliance with water only, at least three times, to ensure thorough rinsing. ensure thorough rinsing.

Hints for Great-Tasting Coffee

1. Maintaining a clean coffee maker is crucial for the best coffee experience. Consistently follow the brewing.
2. Preserve the freshness of unused coffee powder by storing it in a cool, dry place. Once opened, reseal the coffee packaging securely and store it in the refrigerator.
3. For superior flavor, purchase whole coffee beans and grind them just before brewing.
4. Avoid reusing coffee grounds as this diminishes the coffee's richness. Do not reheat coffee; it's most flavorful immediately after brewing.
5. When oiliness is observed on the surface of brewed coffee, often a sign of over-extraction, clean the coffee maker. The presence of oil droplets can also be due to the oils in the coffee grounds.
6. Note that oiliness may be more prevalent with the use of heavily roasted coffee beans.

Environmentally Friendly Disposal

You can contribute to environmental protection! Remember to comply with local regulations when disposing of electrical appliances. Hand in non-functional electronic equipment to certified waste disposal centers.

Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at

info@lepresso.com

Website: lepresso.com

Instagram: [lepresso_official](https://www.instagram.com/lepresso_official)

