

# LéPRESSO

**700W Temperature Controlled Kettle  
with Digital Display Base BS Plug**

SKU: LPKTTTWH LPKTTTCKBK LPKTTTCGY



# Important Safeguard



**\*To disconnect, turn any control to "off," then remove the plug from the wall outlet.**


**\*Do not use the appliance for other than its intended use.**

**\*Do not use outdoors.**


- 1. Ensure to read the manual thoroughly when utilizing this product.**
- 2. Prior to engaging power, verify that your outlet voltage matches the voltage stated on the rating label of the electric kettle. If there is a discrepancy, refrain from using this product and contact the retailer where you purchased the product.**
- 3. The power plug must be inserted into a grounded outlet to ensure proper grounding.**
- 4. The kettle is designed to be used exclusively with the attached base unit; the base unit is not intended for any other use.**
- 5. Avoid draping the power cord over the edge of the table or contacting hot surfaces to prevent damage to the cord.**
- 6. Do not place the product adjacent to or on top of a high-temperature gas or electric stove.**
- 7. Never operate the kettle without water to avoid damaging the heating element.**
- 8. Position the kettle in a stable location where it is not easily accessible to children to prevent accidental pulling of the power cord or toppling of the kettle, which may lead to injury or damage.**
- 9. To prevent the risk of electrical shock, fire, and personal injury, do not submerge the cord, plugs, or appliance in water or any other liquid.**

10. After the water is boiled, be cautious not to touch the steam ejected from the spout to avoid scalding from the steam.
11. Exercise caution when the kettle is hot and requires refilling; open the lid carefully.
12. This product is exclusively for boiling water and is not suitable for storing coffee, tea, alcohol, or chemicals.
13. Avoid contact with hot surfaces to prevent burns; however, the handle and switch button remain safe to touch.
14. The kettle should not be moved while switched on.
15. Operation of this product by children is prohibited.
16. Utilize only manufacturer-recommended spare parts to prevent fire, electric leakage, or other damage.
17. Disconnect the kettle from the electrical outlet when not in use and prior to cleaning; allow the kettle to cool down before cleaning.
18. Maintain the lid closed while boiling water to prevent burns and do not open the lid during this process.
19. When dispensing, ensure the cup is directly underneath the spout.
20. Do not exceed the maximum indicated level with water as this could result in hot water spraying out.
21. Cease using the product if the power cord, plug, or any electrical components are damaged. Contact your product dealer or authorized service center for repairs.
22. The appliance may be operated by individuals with reduced physical, sensory, or mental capabilities if they are under the supervision or instruction of someone responsible for their safety concerning the appliance's use.
23. This appliance is intended for domestic use and similar settings.
24. Retain this manual for future reference.

# Product Diagram

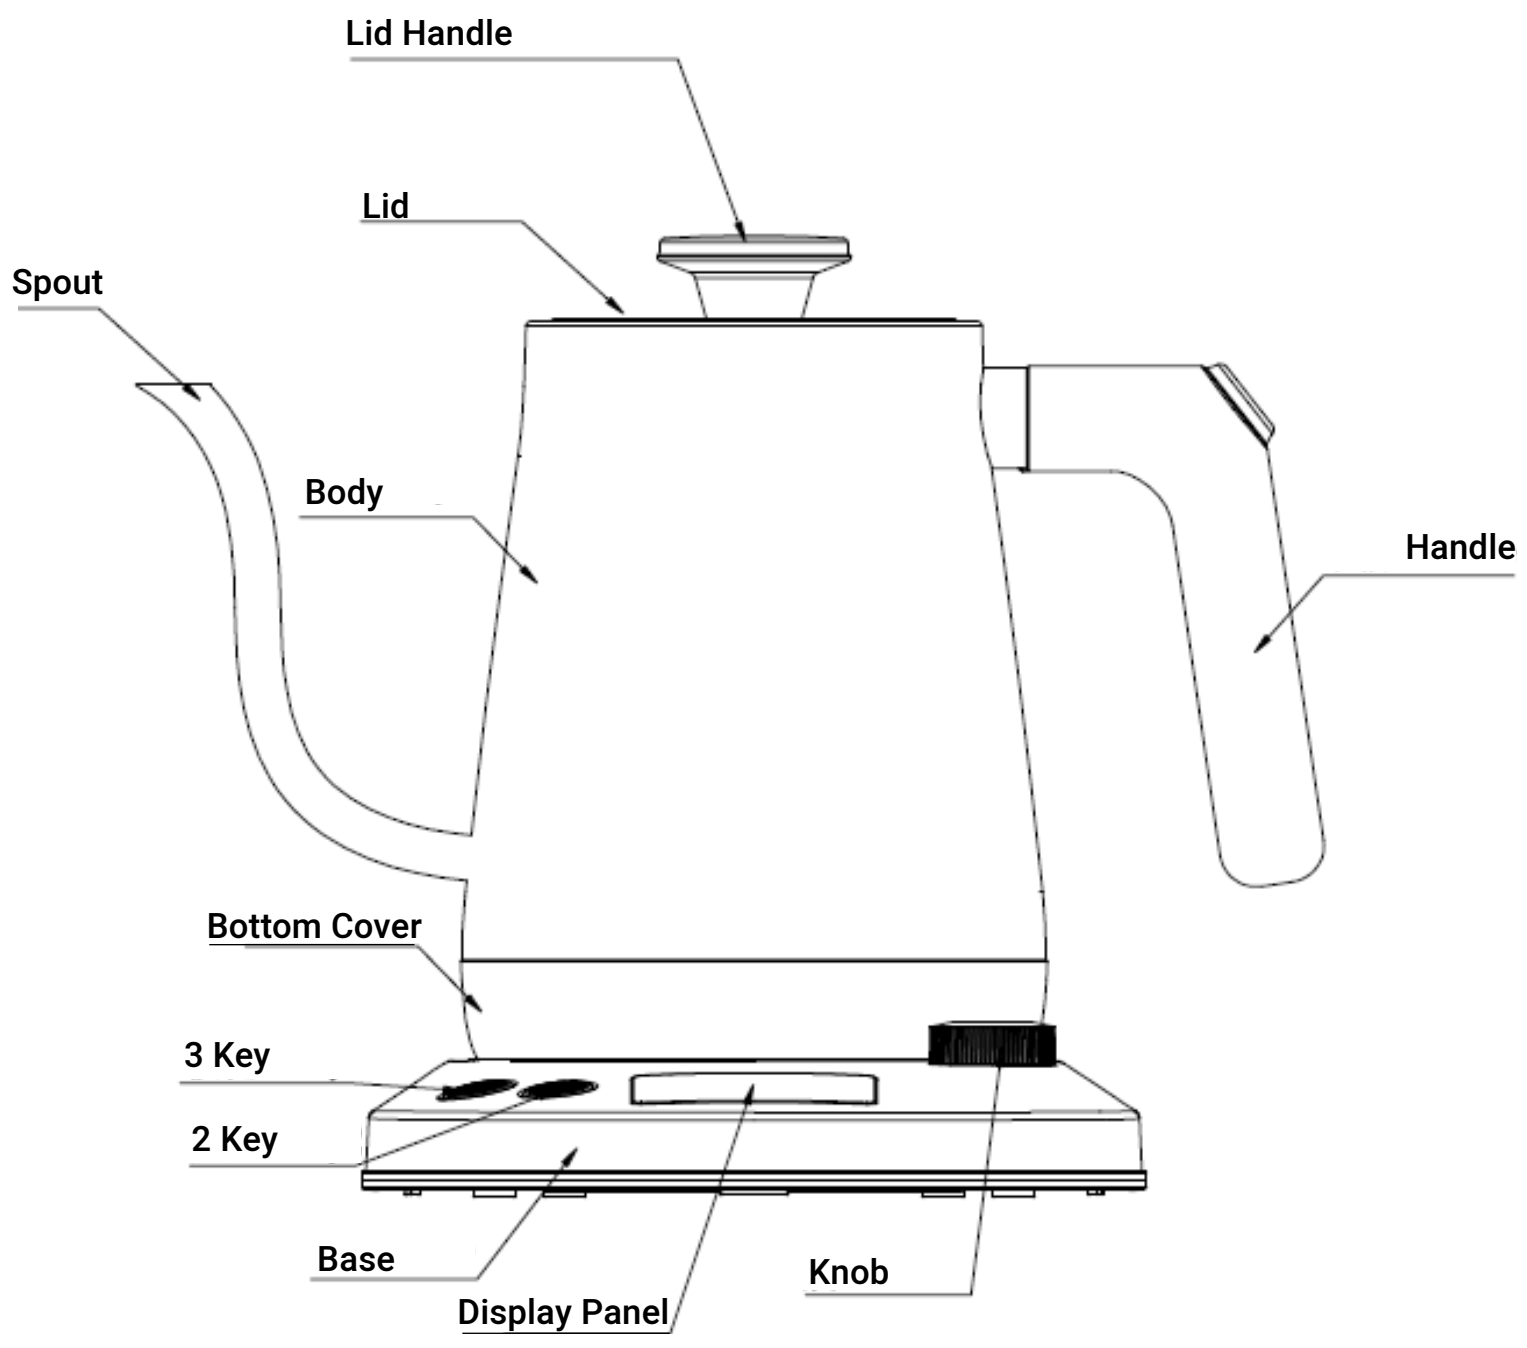

# User Interface

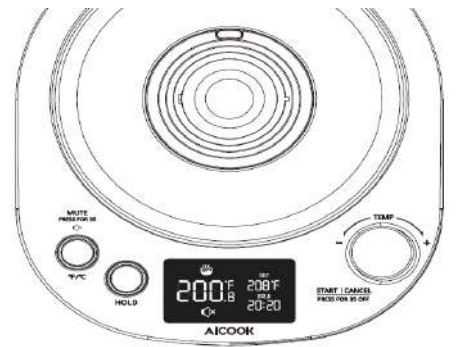

## Temperature Knob:

Utilized for initiating operation and selecting the desired temperature.

To forcibly shut down the machine, press and hold the temperature knob; in the shutdown state, pressing the temperature knob returns it to standby mode.

Rotate the knob to adjust the temperature: turn clockwise to increase and counterclockwise to decrease, ranging from 100 to 212°F. The temperature setting can also be left unadjusted.

## °F/°C Button:

A short press toggles between Celsius and Fahrenheit. For muting, press and hold.

Upon pressing the °F/°C button, a beep will sound, and the display will switch to Celsius. Pressing the button again will cause another beep, and the display reverts to Fahrenheit as the default for water temperature readings.

A long press on the °F/°C button activates mute mode; the mute icon will illuminate, and the key tone is silenced. To exit mute mode and reactivate sound notifications, long-press the button again. This feature is operational during both standby and active modes.

## Hold Button:

Alters the keep warm function.

Pressing the HOLD button once will beep, activating the keep warm light indicator and extending the hold time post-heating to 2 hours.

This function is active during standby; if the set temperature is 212°F, the keep warm feature is inactive, and pressing the keep warm button will not produce a response.

# Operation Steps

## **Before the first use:**

\*When using the kettle for the first time, it is advisable to clean it. The cleaning method is to fill the kettle to maximum capacity with water, then empty it completely and repeat this process twice before its first use.

Note: The kettle's maximum capacity is 0.8 liters

## **Follow these steps:**

1. Remove the kettle from the power base, lift off the lid, fill with water, then securely replace the lid.

Note: The water added should not surpass the maximum level indicator nor be less than half a cup to prevent either overflow or the water from boiling away too quickly. Ensure the lid is firmly closed before energizing the unit.

2. Position the kettle on the power base, connect it to the power supply, and press the button which will beep to indicate that the kettle has powered on.

3. Press the temperature knob to start the heating process. The real-time temperature indicator will light up, and the display will shift from flashing to steady, indicating the set temperature. Pressing the knob again during boiling will cease the process, allowing for the water to be reboiled as needed.

## **For subsequent uses:**

1. Adjust the temperature using the temperature knob and initiate the heating process by pressing the knob. Once the water reaches the selected temperature, an alert will sound, and the kettle will switch to standby mode after 10 minutes if not used.

2. If the lid is open after boiling, the kettle does not power off automatically. Close the lid to maintain the standby mode.

3. If the kettle is replaced on the power base within 10 minutes of boiling, it will resume its previous state; if it is placed after 10 minutes, it will switch to the on state.

4. To maintain the temperature, adjust the knob to the desired level. If the real-time temperature is higher than set, the kettle will maintain the current temperature. If it does not rise after a period, it will default to the on state.

5. In high-altitude regions, if the water temperature does not rise adequately within a set time, the digital display will increment by 2°F every two seconds until reaching 200°F, then it will switch off.

6. To refill, lift the kettle from the base and add water.

**Note:** Use caution when handling boiling water and do not open the lid during this time to prevent scalding. When not in use, place the kettle on the power base and unplug from power outlet.

## Cleaning and Maintenance

1. Before cleaning, ensure that the kettle is disconnected from the power source. Do not submerge the kettle or the power base in water, nor allow them to become wet, to prevent the risk of leakage. Let the kettle cool down completely before beginning the cleaning process.

2. For external cleaning, wipe the kettle's surface with a moist, soft cloth, then follow with a dry cloth to remove any moisture.

**Note:** Do not use chemicals, metallic scourers, wood chips, or any abrasive materials for cleaning.

3. To remove sediment build-up from minerals present in tap or non-distilled water—which may affect the kettle's performance—regular descaling is recommended. Follow the descaling agent's guide or use white vinegar as outlined below:

3.1 Add three cups of white vinegar to the kettle, then fill with water until the mixture fully covers any sediment. Leave the solution to soak overnight.

**3.2 The following day, dispose of the vinegar solution, then fill the kettle to the maximum level with fresh water and boil. Discard this water. Repeat the boiling and disposal process several times until there is no vinegar odor remaining in the kettle.**

**4. When the kettle is not in use or is being stored, neatly coil the power cord in the designated storage area at the bottom of the base.**

## **Contact Us**

**If you have any questions or concerns about our Shipping and Returns Policy, please contact us at [info@lepresso.com](mailto:info@lepresso.com) .**

**Website: [lepresso.com](http://lepresso.com)**

**Instagram: [lepresso\\_official](https://www.instagram.com/lepresso_official)**