

## Wall-Mounted Manual Screen Instructions

### Structure


- Ensure the moving parts of the drive are installed at least 25 mm above the floor.
- Select a suitable location for the installation, ensuring the screws are level and strong enough to support over 25 kg.

### Useful Instructions


- Extend the screen by pulling down slowly.
- To stop, release at the desired height; the screen will lock in place.
- To retract, pull slightly and guide the screen back up.
- If it does not lock, attempt the process again.

### Warnings

- Do not fold the screen or touch it with sharp objects.
- Avoid exposure to liquids or high temperatures.
- Clean with a soft cloth, avoiding harsh chemicals.
- If the screen will not retract smoothly, guide it gently back to the housing to avoid damage.
- If permanently jammed, contact the service center.
- If unused for long periods, disassemble and store safely.

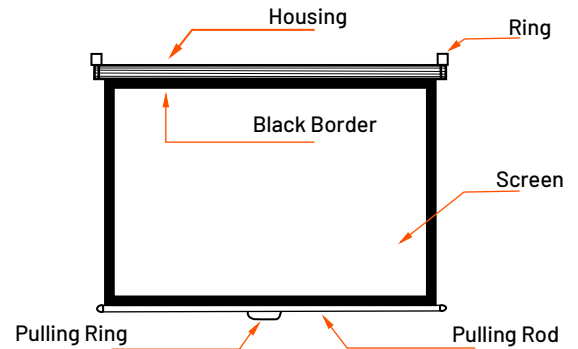

## Tripod Screen Instructions

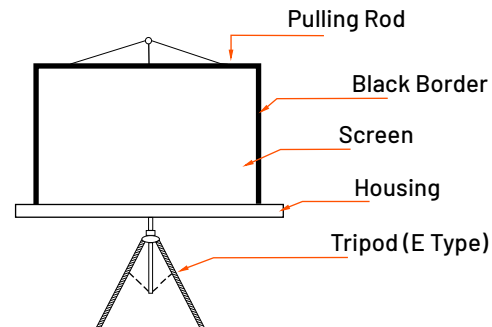

### Installing

- Set up the tripod base, raise the upper bar to the desired height, then lock it in place.
- Adjust the screen height via the pulling rod and secure it.

### Useful Instructions

- Ensure the tripod is stable. Adjust the screen height gently and with caution.

### Warnings

Similar to the wall-mounted screen:

- Do not fold the screen or touch it with anything that may damage the surface.
- Protect it from liquids and extreme temperatures.
- If the screen is dirty, clean it with a gentle touch, and if it jams, gently guide it back.
- Contact service for persistent issues.
- For long-term storage, retract and pack the screen securely.