

porodo | CHOOSE THE BEST

Android TV Box 2 GB Support 4K

SKU:PD-ANTVB-BK




Before installing and using the product, please carefully read this User Manual to guarantee correct usage.

Safety Instructions

1. Position the device horizontally at all times.
2. Utilize the power adapter provided with the device.
3. Maintain a distance between the device and any heat sources to prevent damage.
4. Place the device in an area with proper ventilation.
5. Keep the device clear of damp and dusty conditions to reduce the risk of fire and electrical shock.
6. In the event that the device emits smoke or you detect a burning odor, immediately power down and disconnect the power adapter.
7. Disconnect the power adapter if the device will not be used for an extended period.
8. Avoid placing heavy objects on top of the device.
9. Do not connect the power adapter with wet hands to prevent electric shock.
10. Refrain from disassembling or modifying the device on your own to avoid electric shock or damage.
11. Do not use a damaged power cable and plug.

Installation Instructions

Please refer to the accompanying illustrations and guidelines for connecting the TV, Power, Network, and other devices.

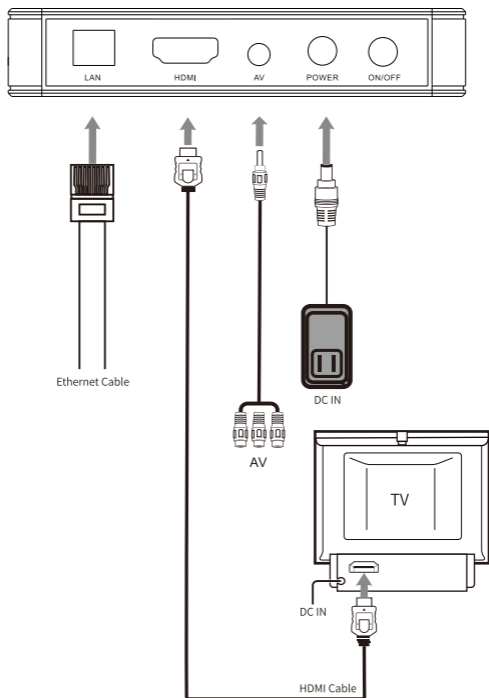

1. Connection with TV

Connect the HDMI/AV cable to the corresponding HDMI/AV port of both the Android TV box and the television set.

2. Connection with Power

Connect the power adapter to the Android TV box.

3. Connection with Network

3.1 Wireless Connection: Navigate to System Settings > Network Settings > Wireless Network, select your Wi-Fi SSID, and enter the correct password to establish a connection.

3.2 Ethernet Connection: Insert the Ethernet cable into the LAN port of the Android TV box and connect the other end to the LAN port of your router or to the Ethernet port of your home broadband network.

Accessory List

The package includes the following accessories:



Android TV Box



Power Adapter



Remote Control



HDMI Cable



User Manual

Troubleshooting Guide

1. TV Display Issues

If there's no display or signal, check that the power cord is connected and the electrical outlet has the normal voltage. Ensure the HDMI/AV cable is properly connected, and select the correct source on your TV.

2. Audio Problems

If the TV displays images but there is no sound or the sound is too low, verify that the audio cable is connected properly. Ensure the volume on your box or TV is not set to mute or too low. Increase the volume if necessary.

3. Network Connection Issues

If the network cannot be connected, re-establish the internet connection. Check if the Wi-Fi is off or if the signal strength is weak. Consider restarting the Wi-Fi or repositioning your router for better signal reception.

4. Remote Control Malfunction

Ensure you are using the remote control in the correct direction. Replace the batteries if the remote control has low power.

Contact Us

If you have any questions about this Privacy Policy, please contact us at: info@porodo.net

Website: porodo.net

Service Support: support@porodo.net

Instagram: [porodo](https://www.instagram.com/porodo)