
POTOGO LIFESTYLE

AUTOMATIC CAHPINGTENT


Quick Set-Upl Wind Resistance


STEP-1

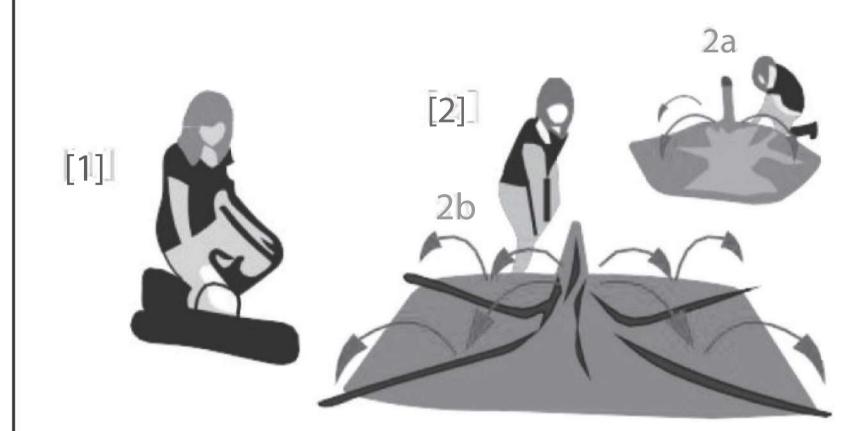

Take the tent out of the storage bag and until the ropes
Open the tent and spread out the six legs

STEP-2

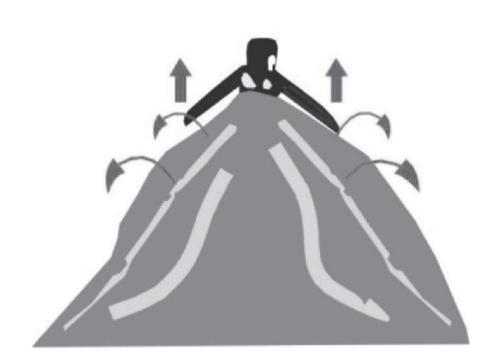

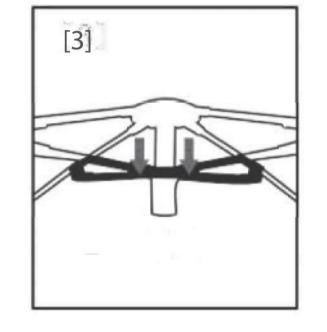


3. Lift the tent by hand and it will open automatically, press down on the top of the tent until you hear a locking sound.

STEP-3




- 4. Once the tent is open, make sure all the poles are securely locked.
- 5. Insert pegs into the six legs of the tent and make sure the tent is fully extended.

STEP-4

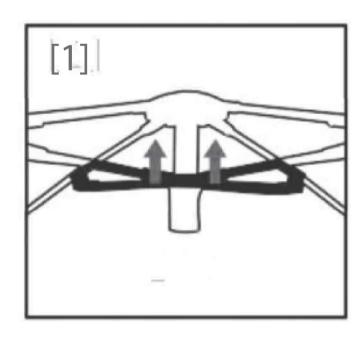


Single layer hexagonal tent does not need to be locked/unlocked

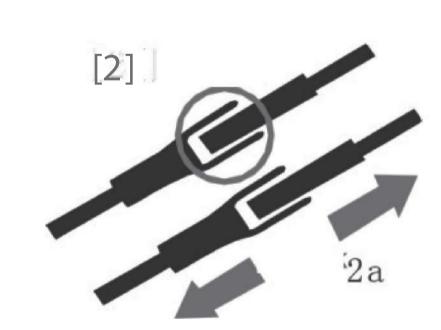


- 1. Press down on B until the poles retract automatically.
- 2. Make sure that the joints of the poles are not locked.

STEP-5

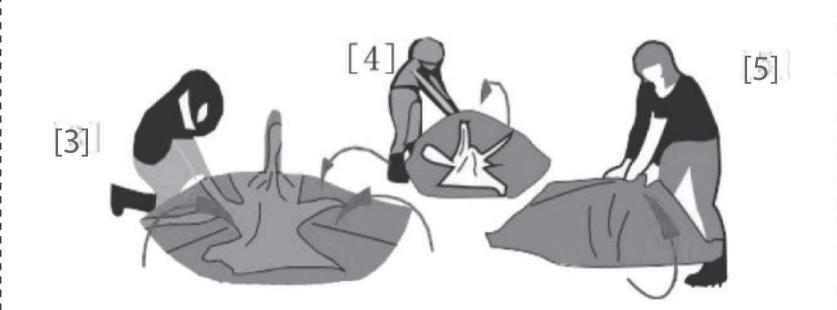

- 3. Remove the pegs and fold the hexagonal corners towards the centre, making sure that the joints of the poles are not locked and that the centre is upright.4. Try to keep the tent as flat as possible to increase the ser vice life and facilitate storage. To unlock the tent, gently pull the joints of the poles outwards, and then fold it inwards.
- 5. In order to store the tent as neatly as possible, the air inside the tent must be exhausted as much as possible.

STEP-6

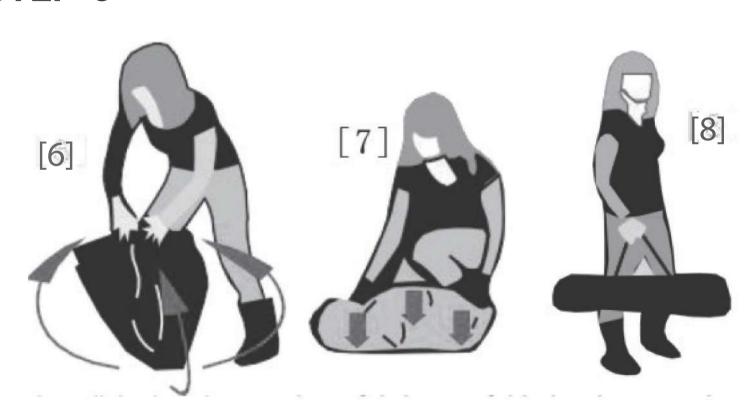

- 6. Fold all the poles with the tent to the centre.
- 7. After removing the air from the tent, wrap the tent up neatly.
- 8. Tie up the tent, put it into a storage bag and store it in a dry environment.

