

porodo



Smart Voice Jump Skip Rope

SKU : PD-SMVJP-BK

Before installing and using the product, please carefully read this User Manual to guarantee correct usage.

Table of Contents

- List of Main Products-----01
- Security Information-----01
- Installation Steps-----02
- Rope Length Adjustment-----03
- Specifications-----03
- Smart Jump Rope Description-----04
- TUYA App Installation-----07
- FAQ-----08
- Name and Content of Harmful Substances in the Product-09
- Announcement-----10
- Safety Precautions-----11
- Warranty Statement-----12

List of Main Products

Main and auxiliary rope skipping handles
 3M rope for skipping
 Storage bag
 Type-C charging cable
 Rope buckle
 Instructions
 Rope cap

*Cordless Ball (Double Rope Version)
 *Carrying Case (Deluxe Version)

Security Information

Before using this product, read the safety instructions and adhere to standard safety precautions. Misuse in contradiction to this manual may result in product damage.

Notes

1. Disassembly by anyone other than authorized technicians is not advised. Users should not attempt self-disassembly.
2. Avoid placing the equipment near any source of heat or open flame, such as heaters, ovens, fires, candles, or any location that could generate high temperatures.
3. Ensure that children and pets are kept away from the equipment and its accessories to prevent injury or equipment malfunction.
4. This product should only be used within a temperature range of -2° to 45° Celsius. Avoid using it in extreme temperature conditions.

5. When charging, connect the plug carefully and avoid prolonged use after full charge to preserve the equipment's battery. Do not rely on direct charging as the only means of battery maintenance.

6. Before skipping rope, prepare your body. Warm up your joints and muscles to prevent strain or injury and promote better blood circulation.

7. After your workout, it is recommended to stretch, especially focusing on the legs to alleviate muscle tension or soreness.

Installation Steps

Step 1

Insert the rope through the large hole of the buckle, then thread it through the turning head at the top of the handle.





Step 2

Rotate the rope and guide it through the hole on the opposite side of the turning head.



Step 3

Secure the rope by clamping it into or threading it through the small hole of the buckle. This completes the handle and rope assembly. Adjust the buckle position for personalized grip and usage habits.

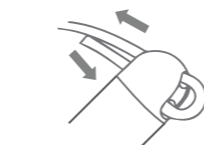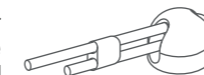

Rope Length Adjustment

To adjust the rope length to your height:

Stand upright, center the rope under your feet, and hold both handles at hip height. Stretch the rope taut to measure the ideal length, ensuring the handle aligns with your elbow joint. For best performance, the rope should be long enough to promote gradual improvements in agility and speed but short enough to maintain control. Adjust the length and secure the buckle. If necessary, trim any excess rope for safety and efficiency.



Adjustment Comparison Table


Height (cm)	140	150	155	160	165	170	175	180	185
Rope Length (m)	2.4	2.5	2.6	2.7	2.75	2.8	2.85	2.9	2.95

Specification

Product Name: Smart Voice Jump Skip Rope
 Product Model: PD-SMVJP
 Approval Code: CMITID: 2020DP15071 Wireless Transmission Module
 Handle Dimensions: 160mm length x 24mm diameter
 Handle Weight: 124g ± 3g
 Input Voltage: 5V
 Battery Capacity: 200mAh
 Battery Type: Lithium-ion polymer
 Power Rating: 2W

Supported Systems: iOS 12.0 or later, Android 6.0 or later
 Connectivity: Bluetooth 5.0
 Sensors: Triple Hall sensors
 Charging Port: USB Type-C

Smart Jump Rope Description

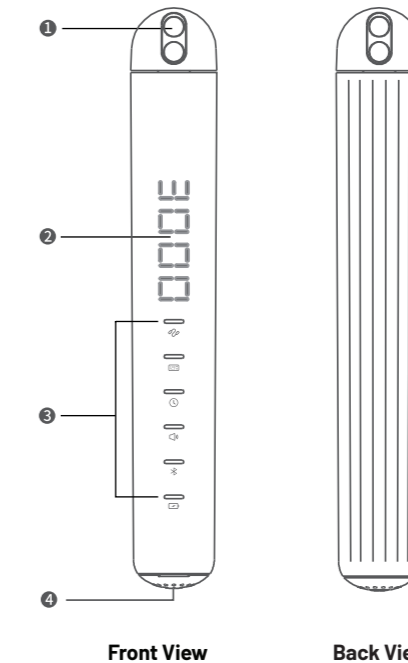


Front View

Back View

1. Swivel:

 
Designed for securing the skipping rope.

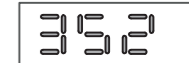

2. LED Light Display:

Free Jump Mode: Shows the number of skips.
 Count Skip Mode: Displays the countdown timer.
 Timed Jump Mode: Shows countdown in seconds.
 Charging Mode: Indicates current battery level.

3. Status Indicator Description:

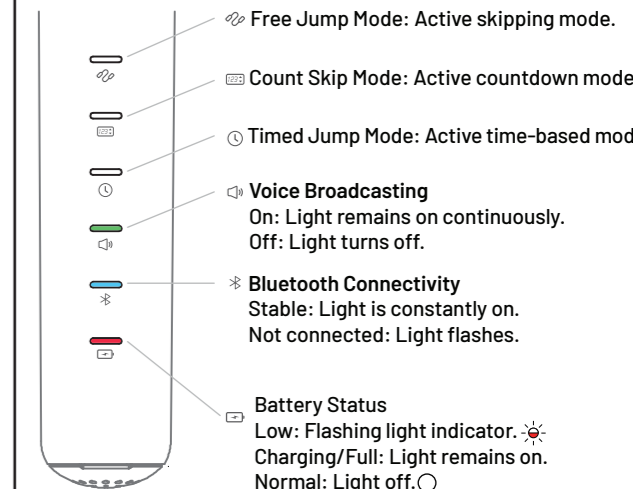


4. USB Charging Port

Open the cover gently at the handle's end to reveal the USB charging port.

Full charge is achieved in 60 minutes, providing up to 28 hours of operational time and up to 30 days in standby mode.

Connections and Indicators

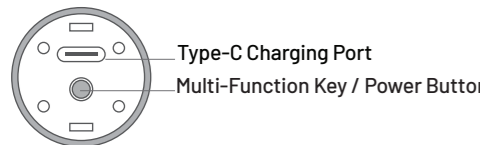

Long Press (2 seconds): Power On/Off
Double Press: Toggle Voice Broadcast On/Off
Short Press: Cycle through modes

5. Multi-Function Button Operations

1. To power on from the off state, press and hold the button for 2 seconds.
2. To pause the skipping function, press and hold the button for 2 seconds when active without motion; it will pause.
3. To end a workout session, enter any mode (free jump, timed jump, or count jump) and press briefly to stop.
4. In timing or counter modes, if the rope reaches the set target number, press the key briefly to stop the session.
5. Activate or deactivate voice broadcasting with a double press.
6. Reset the device by pressing the button five times consecutively.

Timer Customization

Standard timer for count skip mode is set to 60 seconds, but the preset times of the timer can be adjusted up to 3000 counts via the app.

TUYA App Installation

For Android:

Compatible with Android 6.0+, Magic UI 2.0+, EMUI 8.0+, and higher. Download the TUYA app from the Google Play Store or scan the provided QR code for the latest version.



For iOS:

Compatible with iPhone4 and above; requires the latest iOS version. Download the TUYA app from the App Store or use the QR code to obtain the latest version.



FAQ

Fault prompt	Solution
Unable to turn on.	Verify the device's power status and attempt to recharge the product.
No sound broadcasting.	The audio may be disabled. Reactivate by double-clicking the power button.
APP: Unable to connect	-Ensure the mobile phone's Bluetooth or GPS is activated. -Power on the device's handle to connect.
The cordless ball detaches during use.	Confirm the rope buckle's proper installation as per guidelines.
Rope detaches during use.	Inspect for obstructions in the swivel's groove that could impede the rope.
Rope buckle detaches during use.	-Ensure the rope is threaded through the rope buckle's large hole first, then the small hole during setup. -Check that rope risers are correctly installed.

Note: Some issues may be resolved by restarting the device. If problems persist and cannot be addressed using the provided solutions, please contact the after-sales customer service team for assistance.

Name and Content of Harmful Substances in the Product

In compliance with relevant regulations and requirements for restricting hazardous substances in electrical and electronic products (Order No. 32 of the Ministry of Industry and Information Technology of the People's Republic of China), the hazardous substances in this product are categorized based on parts and declared as follows:

Part Name	Harmful Substances					
	Lead(Pb)	Mercury(Hg)	Cadmium(Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Outer Casing	○	○	○	○	○	○
Rope	○	○	○	○	○	○
Circuit Board Assembly	×	○	○	○	○	○
Data Cable	×	○	○	○	○	○

This table is prepared in compliance with SJ/T 11364.
"○" denotes that the content of the hazardous substance in all homogeneous materials of the component is below the limit specified in GB/T 26572.
"×" indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit specified in GB/T 26572.

The hazardous substances contained within this product result from the lack of suitable substitute substances due to current technical limitations, yet they comply with China's administrative measures for restricted use of hazardous substances in electrical and electronic products and are in accordance with the European Union's Restriction of Hazardous Substances (RoHS) Directive. The design ensures that the appearance parts made of non-toxic and harmless environmental-friendly materials, conforming to the environmental standards of Oilsil under the ball, will not harm human health.

5 The electric and electronic products sold within the People's Republic of China will bear the "EPUP" environmental protection service life symbol. The number 42 and the numbers in the circle represent the normal environmental protection service life of the products.

Announcement

1. Prior to installation and usage, thoroughly read the provided documentation, paying special attention to safety instructions. Retain this document for future reference.

2. Illustrations and descriptions within this document serve solely for explanatory purposes and should be considered as general guidance. The actual product may differ. Some features may be specific to certain models only. Unless stated otherwise, this document does not constitute a detailed specification of the product. For detailed specifications and configurations, please refer to the relevant sections of this document or inquire with the product vendor. Updates to products, applications, and content may occur over time, reflecting changes in technology and usage.

3. Stated storage capacities represent the theoretical maximum; the actual user-accessible capacity may be less. Technical performance is based on optimal conditions and actual performance may vary due to specific environmental factors and settings.

4. Certain products may require internet access for full functionality, which may incur data usage as specified by network service agreements. Be aware that using features involving network services can increase data consumption and may lead to additional charges from your service provider.

▲ Safety Precautions

1. Utilize only the original charging cable provided by the manufacturer.
2. Do not operate the product near open flames or within environments prone to cause damage to heat-sensitive products.
3. Avoid using the product in conditions exceeding 45°C or below -20°C.
4. Handle the charging cable with care to prevent damage. Refrain from using the cable to drag or pull the product, do not use it as a makeshift handle, and avoid trapping it in doors or tight spaces.
5. Avoid bending the charging cable at acute angles or corners. Ensure that the cable does not lie across pathways where it can be subject to wear, and keep it distant from sources of heat.
6. Discontinue use of the charging cable if it shows signs of damage.
7. Do not incinerate the product, regardless of its condition. There is a risk of battery explosion if the product is burned.

Warranty Statement

-Porodo doesn't cover any damage caused by the normal use of the product over time during the warranty period.
-The Porodo warranty doesn't include coverage for improper use, deliberate damage, accidents, theft, carelessness, or any repairs done by unauthorized service centers.
-The power needs for each product are clearly stated on their packages. Please check these requirements against those of your country before buying. Porodo won't be responsible for any problems related to this.

*Products that you buy directly from our Porodo website or shop come with a 24-month warranty.

*When you buy Porodo products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at: info@porodo.net
Website: porodo.net
Service Support: support@porodo.net
Instagram: [porodo](https://www.instagram.com/porodo)