



**Powerology**  
**Portable Juicer 6 Blades**

SKU: P6BPJBK


## Safety Guidelines


### Warning


Before installing and using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference. It is imperative to adhere to the guidelines outlined in this instruction manual to prevent potential hazards.


- Carefully review this manual before operating the machine. Retain the manual for future reference.


- Adhere strictly to the crucial safety warnings provided. Non-compliance with these safety measures may result in injury or harm to yourself and others. Always follow the directives in this instruction manual.

-  Do not remove the jug cover while the machine is in use. At no time should you touch the rotating parts or blades.

-  In the event of a food obstruction during blending, cease operation immediately and inspect the machine for any hard items like seeds or stones that may be causing the jam. Remove the obstruction, then restart the machine. Ensure the machine is off before investigating any blockage.

-  This machine is not to be operated by children. Ensure it is stored out of children's reach.

-  The contents within the jug should not exceed two-thirds of its capacity. Verify that the lid is securely fastened before initiating the machine's operation.

-  This machine is unsuitable for grinding hard, dry ingredients such as nuts, coffee beans, etc. Such use could damage the machine and diminish its operational lifespan.


❗ After blending, the food or drink should be consumed promptly. Do not store the blended contents for more than six hours to prevent the spoilage of food and beverages.

## Specifications

Product Name	Portable Juicer 6 Blades
Container Capacity	450ml
Battery	2500mAh x 2 / 7.4 V DC
Rated Voltage	7.4V DC
Motor Specification	7.4V DC
Rated Power	126W
Motor Rating Speed	16500rpm

## Schematic View

- A. Lid
- B. High Borosilicate Glass Container
- C. Cutting Blades
- D. Primary Unit
- E. Activation Button
- F. Power Input
- G. Foundation
- H. Power Switch

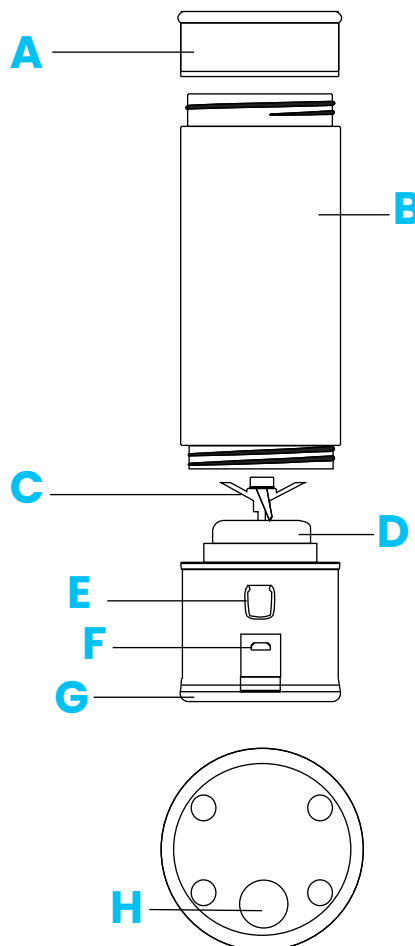

## Light Indicator Status

- A. Main Power:** Engage the ON/OFF switch to initialize the machine. It is ready for use when the indicator transitions from red to white. Then, press the front button to commence operation.
- B. Blending Mode:** To activate, press and hold the button for 2 seconds. The blender initiates automatically, signified by a white light. It will deactivate after 45 seconds automatically.
- C. Ice Crushing Mode:** Activate this function by pressing the button twice in rapid succession. The blender will begin automatically, indicated by a white light and will cease operation after 45 seconds.
- D. Charging:** While connected to a USB charging cable, a red indicator signifies the charging status. A white light will indicate the machine is fully charged and operational.

## Cautions

- 1.** If the jug is not affixed to the base properly, the blender will be non-operational and the red indicator will blink five times to signal this problem.
- 2.** During the charging process, the machine remains inactive regardless of attempts to activate it using the power button.
- 3.** Should there be any excessive loading or obstruction hindering the blender's function, it will cease operation automatically. A flashing red and white light alternately will indicate this status.
- 4.** A red light that flashes ten times denotes a depleted battery.
- 5.** When the contents are insufficient—below the level of the blades—the machine will halt after 5 seconds as a safety precaution, and the red light will flash three times.

**6.** Due to the unique manufacturing process of the glass container, slight variations are normal. If you notice any leakage or if the container becomes loose, simply unscrew it for correction and reassemble it properly.

**7.** For optimal battery health, it is recommended to charge the device for a period ranging from 3 to 5 hours.

**8.** To achieve the best results with blending, the ideal ratio is 100 grams of solid ingredients to 200 grams of liquid, with an allowance of  $\pm 10\%$ .

## Operation Guideline



1



2



3



4

### 1. Blending Function:

**1.** Begin by chopping the ingredients into smaller pieces, approximately 1.5 to 2.0 cm in size, and ensure that any skins and nuts are removed.

**2.** Add water or milk into the container.

**3.** Tilt the machine to a  $45^\circ$  angle, then activate it by pressing and holding the switch for 2 seconds.

**4.** Turn the blender upside down and gently agitate to enhance the blend's texture and flavor.



1



2



3




4

## 2. Ice Crushing Function

1. Prepare ice cubes weighing between 45-40g, ensuring each cube is approximately 2.5-1.5cm in dimensions (length/height/width).
2. Place the ice cubes into the container.
3. Tilt the appliance to a 45° angle and initiate the ice-crushing function by pressing the power switch twice in quick succession.
4. Invert the blender and gently shake to facilitate more efficient ice crushing.

## Installation Guideline

1. Verify that the silicon rings are properly situated on both the lid and base.
  2. Activate the machine by pressing the ON/OFF button; it is operable when the indicator light transitions from red to white.
  3. Position the jug onto the main base and rotate it clockwise until it is securely locked.
- Note:** Utilize the switch button to operate when the indicator light is white.

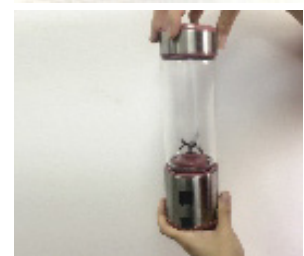

## Charging Instructions

**Note:** The device has a battery capacity of 2500mAh x2. For charging, use a USB cable connected to an adapter with a current of 2A or less. Alternatively, you can charge using a power bank, a computer's USB port, or a car's charging port.

1. To begin charging, engage the ON/OFF button. The machine is ready to charge when the indicator light switches from red to white.
2. Insert the 'Micro B' side of the USB cable (commonly referred to as the Android cable, the smaller end) into the device's charging port.
3. Connect the 'USB side' (the larger end of the Android cable) to an adapter, power bank, USB port of a computer, or similar charging points.



**Notice:** A red indicator light signifies that the machine is currently charging. Once the charge is complete, the indicator will change to white. Please note that the machine does not operate while it is being charged.

## Troubleshooting

### Problem 1:

Red light flashes 5 times but the machine doesn't operate.

**Cause:** The container is not correctly installed on the base.

**Solution:** Reinstall the container properly onto the base.



### **Problem 2:**

The machine doesn't operate and the red light flashes 10 times.

**Cause:** Insufficient battery power.

**Solution:** Charge the machine for 5-3 hours.

### **Problem 3:**

The machine ceases operation during use.

**Cause:** Incorrect quantity of food: either too little or too much, triggering the protection mechanism.

**Solution:** Adjust the quantity of food accordingly and restart the machine.

### **Problem 4:**

Red and white lights flash alternately 10 times during operation.

**Cause:** The motor has become jammed.

**Solution:** If there is no obstruction, reset the machine by restarting.

### **Problem 5:**

Water leakage detected.

**Cause:** The silicone component is incorrectly fitted.

**Solution:** Reinstall the silicone component accurately.

### **Problem 6:**

Smoke emission during operation.

**Cause:** The machine has become overheated due to extended use and has automatically shut down for safety.

**Solution:** Allow the machine to cool for 30-60 minutes before restarting.



## **Warranty**

Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website [\*\*https://powerology.me/warranty\*\*](https://powerology.me/warranty) and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

[\*\*https://www.powerology.me/warranty\*\*](https://www.powerology.me/warranty)

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at: [\*\*https://hey@powerology.me/\*\*](https://hey@powerology.me/)

Website: [\*\*https://www.powerology.me/\*\*](https://www.powerology.me/)

Instagram: **Powerology.me**

Facebook: **Powerology**