



ONE CUP COFFEE MAKER


LPBCCMBK

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
4. Do not touch hot surfaces. Use handles or knobs.
5. To protect against fire, electric shock and injury to persons do not immerse cord, plug, in water or other liquid.
6. Remove plug from wall outlet before cleaning and when not in use. Allow appliance cool down completely before taking off, attaching components or before cleaning.
7. The use of accessory is not recommended by the appliance manufacturer. It may result in fire, electric shock and/or person injury.
8. The container is designed for use with this appliance. It can not be used on a range top.
9. Do not clean container with cleansers, steel wool pads, or other abrasive materials.
10. Do not hang power cord over the edge of table or counter, or touch hot surface.
11. Do not place the coffee maker on hot surface or beside fire in order to avoid to be damaged.
12. To disconnect, remove plug from wall outlet. Always hold the plug. But never pull the cord.
13. Do not use appliance for other than intended use and place it in a dry environment.
14. Close supervision is necessary when your appliance is being used near children.
15. Be careful not to get burned by the steam.
16. To disconnect, turn any control to "Off", then remove plug from wall outlet.
17. Do not let the coffee maker operate without water.
18. Never use the appliance if the Ceramic jug shows any signs of cracks. . Use carefully as the Ceramic jug is very fragile.
19. Do not set a hot container on a wet or cold surface.
20. Do not use a cracked container or a container having a loose or weakened handle.
21. Scalding may occur if the cover is removed during the brewing cycles.
22. Some parts of appliance are hot when operated, so do not touch with hand. Use handles or knobs only.
23. Do not set a hot container on a hot or cold surface.
24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
25. Children should be supervised to ensure that they do not play with the appliance.
26. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
27. Do not use outdoors.
28. Save these instructions.

KNOW YOUR COFFEE MAKER

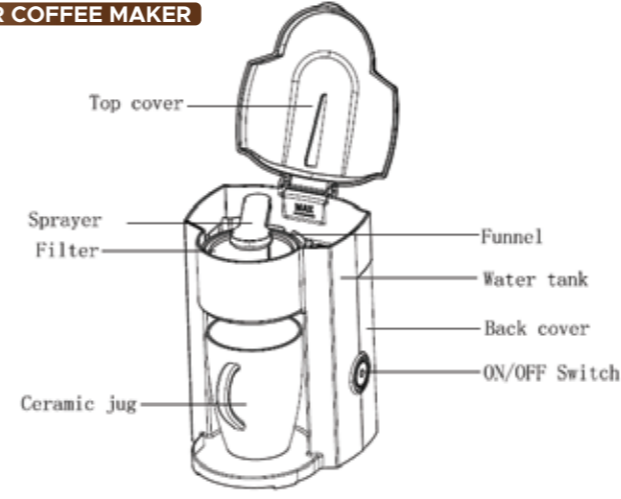

BEFORE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add clean water up to maximum level to brew several times without coffee powder according to the steps below, and then discard the water. Wash the detachable parts thoroughly with warm water.

USING YOUR COFFEE MAKER

1. Open the water tank lid and fill the water tank with cold drinking water. The water level should not exceed MAX level as indicated on water gauge.
2. Swing the sprayer out, put the funnel into Water tank, then place the filter in the funnel, and make sure it is assembled correctly.
3. Add coffee powder into filter. Usually a cup of coffee needs a level spoon of coffee powder, but you may adjust according to personal taste. Close the top cover.
4. Put the Ceramic jug in the right place.
5. Plug the power cord into the outlet.
6. Pressing the switch down, the indicator will be illuminated. The appliance will begin working.
7. Upon completion of brewing coffee, that is one minute later after the coffee stops dripping out, you can remove the Ceramic jug, pour and serve.
Note: the brewed coffee you get will be slightly less than the water you have added as some water is absorbed by coffee powder. DO NOT touch cover ,and so on when operating as they are very hot.
9. Always turn the coffee maker off and disconnect the power supply after use.
26. Note: Be careful when pouring the coffee out, otherwise you would be hurt as the temperature of coffee just finished is high.

CLEANING AND MAINTENANCE

- CAUTION: Always unplug the product from electrical outlet and allow the warming plate to cool completely before cleaning it. Never immerse the unit or power cord into water or any other liquid for cleaning.
1. Clean all detachable parts after each use in hot, sudsy water.
 2. Wipe the product's exterior surface with a soft, damp cloth to remove stains.
 3. Water droplets may buildup in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each

- use of the product.
4. Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaner to clean it.
 5. Replace all parts and keep for next use.

REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, periodically you should clean away the mineral deposits left by the water according to the water quality in your area and the use frequency. We recommend decalcifying your coffee maker as follows, using a solution of white vinegar and cold water. A solution of two tablespoons (30ml) white vinegar in one Ceramic jug of cold water works best.

1. Fill the tank with the vinegar solution to the maximum level as indicated on water gauge.
2. Insert glass Ceramic jug onto the warming plate.
3. Make ensure paper filter (without coffee powder) and funnel are assembled in place.
4. Switch on the appliance and allow it to "brew" de-scaling solution.
5. After "brew" one-cup solution, switch off the appliance.
6. Leave the solution stay for 15 minutes and repeat step 3-5.
7. Switch on the appliance and run off the solution until the water tank is completely empty.
8. Rinse by operating the appliance with water at least 3 times.

HINTS FOR GREAT-TASTING COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the "CARE AND CLEANING" section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee powder since this will greatly reduce the coffee' flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffees are used.



You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

Designed and manufactured by Teqtronix Inc.
All rights reserved 2022.

For more information, please contact our support team: info@lepresso.com

[lepresso_official](https://www.lepresso.com) www.lepresso.com

إزالة الودائع المعدنية

للحفاظ على عمل ماكينة القهوة بكفاءة، يجب عليك تنظيف الرواسب المعدنية التي خلفتها المياه حسب نوعية المياه في منطقتك وكرر الاستخدام. نوصي بإزالة الكلس من صانعة القهوة الخاصة بك على النحو التالي، باستخدام محلول الخل الأبيض والماء البارد. محلول مكون من ملعقتين خيريون (٣ مل) من الخل الأبيض في وعاء واحد وسعمل إبريق الماء البارد الخرفي بشكل أفضل.

١. املأ الخزان بمحلول الخل إلى أقصى مستوى كما هو موضح في مقياس المياه.
٢. أدخل إبريق السيراميك الزجاجي على لوح التسخين.
٣. تأكد من تركيب الفلتر الورقي (بدون مسحوق القهوة) والقمع في مكانه.
٤. قم بتشغيل الجهاز واسمح له "بتخمير" محلول إزالة القشور.
٥. بعد "تخمير" كوب واحد من المحلول، أوقف تشغيل الجهاز.
٦. اترك المحلول لمدة ١٥ دقيقة وكرر الخطوة ٣-٥.
٧. قم بتشغيل الجهاز وتشغيل المحلول حتى يفرغ خزان المياه تمامًا.
٨. اشطف تشغيل الجهاز بالماء ٣ مرات على الأقل.

لتحسينات لقهوة عظيمة المذاق

١. آلة صنع القهوة النظيف ضرورية لصنع قهوة ذات مذاق رائع. قم بتنظيف ماكينة صنع القهوة كما هو محدد في قسم "العناية والتنظيف". استخدم دائمًا الماء ارجا وباردا في صانع القهوة.
٢. قم بتخزين مسحوق القهوة غير المستخدم في مكان بارد وجاف. بعد فتح عبوة قهوة قم بإغلاقه بإحكام واحفظه في التلاجة للحفاظ على نضارته.
٣. للحصول على أفضل مذاق للقهوة، قم شراء حبوب البن الكاملة وحنها جيدا قبل تخمير ذلك بقليل.
٤. لا تعيد استخدام مسحوق القهوة لأن هذا سيقبل بشكل كبير من نكهة القهوة. إعادة تسخين لا ينضج بالقهوة لأن نكهتها تكون في ذروتها مباشرة بعد التخمير.
٥. نظف صانعة القهوة عندما ينسب الاستخراج الزائد في الزيت. قطرات زيت صغيرة على سطح القهوة السوداء المخمرة ناتجة عن استخلاص الزيت من مسحوق القهوة.
٦. قد تظهر الزيوت بشكل متكرر إذا تم استخدام البن المحمص بشدة




بمكث المساعدة في حماية البيئة!
يرجى تذكر احترام اللوائح المحلية: تسليم الكهراء الغير عاملة المعدات لمركز التخلص من النفايات المناسب

تم تصميمها وتصنيعها بواسطة شركة Teqtronix Inc.
تجميع الحقوق محفوظة ©٢٠٢٢.

لمزيد من المعلومات، يرجى الاتصال بنا
فريق الدعم: info@lepresso.com

[lepresso_official](https://www.lepresso.com) www.lepresso.com

تعرف على صانع القهوة الخاص بك

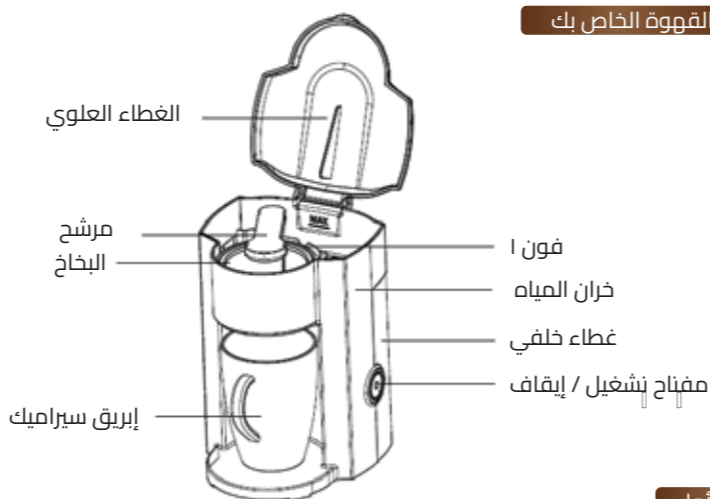

قبل الاستخدام الأول

تأكد من اكتمال جميع الملحقات وأن الوحدة غير بالفة. أضف الماء النظيف إلى أقصى حد للتخمير عدة مرات بدون مسحوق القهوة ومقا للخطوات أدناه، ثم تخلص من الماء. اغسل الأجزاء القابلة للفصل جيدا بالماء الدافئ ماء.

استخدام صانع القهوة الخاص بك

١. افتح غطاء خزان المياه واملأ خزان المياه بماء الشرب البارد. مستوى الماء يجب ألا يتجاوز مستوى الحد الأقصى كما هو موضح في مقياس المياه.
٢. قم بآرئح البياح، ضع القمع في خزان المياه، ثم ضع المرشح في القمع، وتأكد من تجميعها بشكل صحيح.
٣. أضف مسحوق القهوة إلى الفلتر. عادة يحتاج فتجان القهوة إلى مستوى قطعة من مسحوق القهوة، ولكن يمكنك ضبطه حسب ذوقك الشخصي. أغلق الغطاء العلوي.
٤. ضع إبريق السيراميك في المكان المناسب.
٥. قم بتوصيل سلك الطاقة بالماخذ.
٦. الضغط على المفاتيح الأسفل، سوف يخضع المؤشر. سيبدأ الجهاز بالعمل.
٧. عند الانتهاء من تخمير القهوة، أي بعد دقيقة واحدة من توقف بقطر القهوة، يمكنك إزالة إبريق السيراميك، صيها وقدمها.

ملحوظة: القهوة المخمرة التي تحصل عليها ستكون أقل بقليل من الماء الذي أضفته بمنص مسحوق القهوة بعض الماء. لا تلمس الغطاء، وهكذا عند التشغيل لأنها ساخنة جدا.

٩ قم دائما بإيقاف تشغيل صانعة القهوة وأفضل مصدر الطاقة بعد الاستخدام. ملحوظة: كن حذرا عند سكب القهوة، وإلا سيتأذى مثل درجة الحرارة القهوة منبهتها ليونها عالية.

التنظيف والصيانة

- تنبيه: أفضل دائما المنيح عن مأخذ التيار الكهربائي واترك لوحة الإذفة يقوم بالبريد نهماها قبل تنظيف. لا تخمر وحدة أو سلك الطاقة في الماء أو أي سائل آخر للتنظيف.
١. نظف جميع الأجزاء القابلة للفصل بعد كل استخدام في الماء الساخن والصابون.
 ٢. امسح السطح الخارجي للمنيح بقطعة قماش ناعمة ومبللة لإزالة البقع.
 ٣. قد يتراكم قطرات الماء في المنطقة فوق القمع وينساقط على قاعدة المنيح أثناء التخمير. للتحكم في الفطرير، امسح المنطقة بقطعة قماش نظيفة وجافة بعد كل منها استخدام المنيح.
 ٤. استخدم قطعة قماش مبللة لمسح لوحة الإذفة برفق. لا تستخدم أبدا المنظفات الكاشطة للتنظيف.
 ٥. استبدل جميع الأجزاء وحافظ بها للاستخدام التالي.

إجراءات حماية مهمة

- قبل استخدام الجهاز الكهربائي، يجب أن تكون الجنبات الأساسية التالية دائما مبنعة إما في ذلك ما يلي:
١. اقرأ جميع التعليمات.
 ٢. تأكد من أن جهد المنفذ يتوافق مع الجهد المذكور على ملصق التنضيف من صانع القهوة.
 ٣. لا يتم تشغيل أي جهاز به سلك أو قاس بالف، أو في حالة غير طبيعية. إذا كان السلك الرئيسي بالف، يجب استبداله من قبل الشركة المصنعة. أقرب وكيل خدمة أو شخص مؤهل.
 ٤. لا تلمس الأسطح الساخنة. استخدم الأيدي أو المقابض.
 ٥. للتحماية من الحرق والصدمات الكهربائية وإصابة الأشخاص، لا تخمر السلك أو التوصيل أو التيار الكهربائي بالماء أو سائل آخر.
 ٦. قم بإزالة القابس من مقياس الحائط قبل التنظيف وعند عدم الاستخدام. اترك الجهاز باردا أسفل نهماها قبل التفكيك أو تثبيت المكونات أو قبل التنظيف.
 ٧. لا تلمس الشركة المصنعة للجهاز باستخدام الملقح. قد ينيح عن ذلك الحرق والصدمة الكهربائية و / أو إصابة شخص.
 ٨. الحاوية مصممة للاستخدام مع هذا الجهاز. لا يمكن استخدامه على قمة النطاق.
 ٩. لا يتم تنظيف الحاوية بمنظفات أو وسادات من الصوف الصلب أو مواد كاشطة أخرى.
 ١٠. لا تعلق سلك الطاقة على حافة الطاولة أو العداد، أو تلمس السطح الساخن.
 ١١. لا تضع صانع القهوة على سطح ساخن أو بجانب النار لتجنب تلف ذلك.
 ١٢. للفصل، قم بإزالة القابس من مقياس الحائط. امسك القابس دائما. لكن لا ينسحب الحبل.
 ١٣. لا تستخدم الجهاز لغير الغرض المقصود وضعه في بيئة حافة.
 ١٤. الإشراف الدقيق ضروري عند استخدام جهازك بالفق من الأقال.
 ١٥. احرص على ألا تحترق بالبخار.
 ١٦. للفصل، قم بتحويل أي عنصر بحكم إلى "إيقاف التشغيل". ثم قم بإزالة القابس من مقياس الحائط.
 ١٧. لا تضع صانع القهوة يعمل بدون ماء.
 ١٨. لا تستخدم الجهاز أبدا إذا ظهر على الإبريق الخرفي أي علامات تشققات. استخدم بعناية إبريق سيراميك هش للغاية.
 ١٩. لا تضع وعاء ساخن على سطح مبلل أو بارد.
 ٢٠. لا تستخدم حاوية منشفة أو حاوية ذات مقياس مفكوك أو ضعيف.
 ٢١. قد يحدث السمت إذا تمت إزالة الغطاء أثناء دورات التخمير.
 ٢٢. بعض أجزاء الجهاز ساخنة عند التشغيل، لذا لا تلمسها باليد. يستخدم مقابض أو مقابض فقط.
 ٢٣. لا تضع وعاء ساخن على سطح ساخن أو بارد.
 ٢٤. هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص (بما في ذلك الأقال) من ذوي الاحتياجات الخاصة في القدرات الجسدية أو الحسية أو العقلية، أو قلة الخبرة والمعرفة، ما لم يكن كذلك يجب أن يتم فتح الإشراف أو التعليمات فيما يتعلق باستخدام الأجهزة من قبل شخص مسؤول عن سلامتهم.
 ٢٥. يجب مراقبة الأقال. غال لتأكد من أنهم لا يلعبون بالجهاز.
 ٢٦. هذا الجهاز مخصص للاستخدام في المنازل والتطبيقات المماثلة مثل:
 - منا ق مطبخ الموظفين في المطاعم والمكاتب وبيئات العمل الأخرى؛
 - منازل المزرعة
 - من قبل العملاء في الفنادق والموتيلات وغيرها من البيئات السكنية؛
 - بيئات من نوع المبيت والإفطار.
 ٢٧. لا تستخدم في الهواء الطلق.
 ٢٨. احفظ هذه التعليمات.

LèPRESSO

دليل المستخدم



LPBCCMBK

كوب واحد صانع القهوة