


LèPRESSO



MOMENTO 2.0 PORTABLE ESPRESSO










MODEL: LPPESSMBK

PRODUCT OVERVIEW

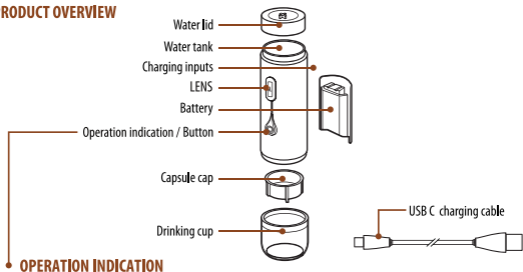

OPERATION INDICATION

OPERATION	LED INDICATION	DESCRIPTIONS	STATUS	AUDIO ALERT
Button - Press Once		1 Orange LED Battery Level 25%	Power on with battery level display	None
		2 Orange LEDs Battery Level 50%		
		3 Orange LEDs Battery Level 75%		
		4 Orange LEDs Battery Level 100%		
Connected to a power source through cable		Flashing 1st Orange LED Battery charging towards 25%	Charging Battery	Beep Once after plug in
		Flashing 2nd Orange LEDs Battery charging towards 50%		
		Flashing 3rd Orange LEDs Battery charging towards 75%		
		Flashing 4th Orange LEDs Battery charging towards 100%		
		4 Orange LEDs fully lit Battery charged 100%		
		Flashing 1 Orange LED	Warning Battery Low	Beep six times before shutting down
Button - Press & Hold for 2 Seconds		Flashing RED LEDs + Battery Level Indicator	Initiate water boiling process	Beep Twice
		Flashing BLUE LEDs + Battery Level Indicator	Dispense Automatically	Beep 5 times when it is completed
Button - Press & Hold for 5 Seconds		Flashing BLUE LEDs + Battery Level Indicator	SKIP water boiling process & dispense immediately	Beep Twice
		2 BLUE LEDs + Battery Level Indicator	Dispense Automatically	Beep 5 times when it is completed
		Flashing BLUE LEDs	System Warning: no water in the water tank	Beeping Continuously

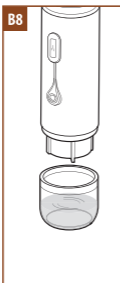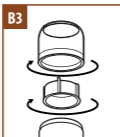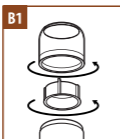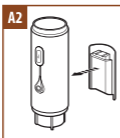

BEFORE FIRST TIME USE

(A1) Unscrew the drinking cup and water lid then clean the drinking cup, capsule cap and inside the water tank with a soft sponge, water and detergent. Screw the drinking cup and water lid back onto the machine when dry.

IMPORTANT NOTE: DON'T WASH MAIN BODY OF MACHINE. Only wash the drinking cup, capsule cap and inside the water tank.

(A2) Insert the battery

CHARGING VIA USB C CHARGING CABLE (CERTAIN MODELS ONLY)

Plug the USB C charging cable into the machine then plug the USB into a mains power adaptor. Allow 2-3 hours charging time.

IMPORTANT NOTE FOR CHARGING: 4 orange LEDs fully lit when the battery is 100% charged.

COFFEE MAKING PREPARATION

(B1) Turn the machine upside down then unscrew the drinking cup and capsule cap.

(B2) Place a capsule into the capsule cap insert. Press the capsule down until flat.

(B3) Screw the capsule cap and drinking cup back onto the machine.

(B4) Turn the machine right side up then unscrew the water lid.

(B5) Pour water up to the **max level mark**.

(B6) Screw the water lid back onto the machine.

The machine is now ready to make coffee.

MAKING YOUR COFFEE

(B7) Using room temperature water to boil: Hold button down for 2 seconds. 2 beeps will sound, the light indicator inside the button will keep flashing red. When the water temperature reaches a predetermined temperature the machine will switch to the pumping and extraction process. When boiled hot water is prepared, you can press and hold the button for 5 seconds, boiling process would be skipped and coffee brewing would be activated directly.

(B8) In 4-5 minutes, you will hear 5 beeps, the LEDs will show blue and your coffee will be ready. Unscrew the drinking cup and enjoy!

(B9) To turn off the machine press the button once. Or it will turn off automatically in a certain seconds.

LèPRESSO




مومنتو،
إسبرسو محمول

بيب خمس
مرات عند
الانتهاء

MODEL: LPPESSMBK

PRODUCT OVERVIEW

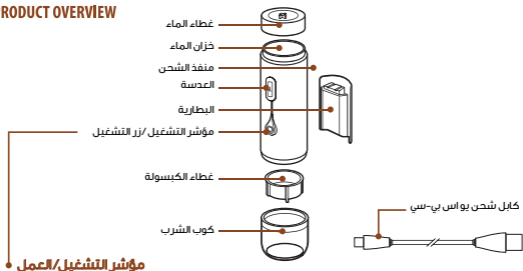

مؤشر التشغيل/العمل

التشغيل	مؤشر LED	المواصفات	الحالة:	لتبوهات الصوت:
الضغط على الزر مرة واحدة		LED برتقالي واحد مستوى البطارية 72% LED برتقاليين مستوى البطارية 70% LED برتقاليات ثلاثة مستوى البطارية 77% LED برتقاليات أربعة مستوى البطارية 71%	تشغيل الطاقة مع عرض مستوى البطارية	لا شيء
عندما يكون متصلاً بمصدر الطاقة عبر الكابل		الوميض للـ 2 LED البرتقالي البطارية تشحن نحو 70% الوميض للـ 3 LED البرتقالي البطارية تشحن نحو 77% الوميض للـ 4 LED البرتقالي البطارية تشحن نحو 71% الإضاءة المستمرة للـ 4 LED البرتقالي البطارية مشحونة بنسبة 71% الوميض للـ 1 LED البرتقالي البطارية تشحن نحو 72%	الشحن تحذير البطارية منخفضة	صغيرة واحدة بعد التوصيل
		Flashing 1 Orange LED	البطارية منخفضة	صغيرة ست مرات قبل إغلاق التشغيل
الضغط على الزر والاستمرار لمدة 2 ثوانٍ		الوميض للـ LED الأحمر مؤشر مستوى البطارية الوميض للـ LED الأزرق مؤشر مستوى البطارية	بدء عملية غلي الماء توزيع تلقائياً	يبب مرتين سيتم الصدى خمس مرات عند الانتهاء
الضغط على الزر والاستمرار لمدة 5 ثوانٍ		الوميض للـ LED الأزرق مؤشر مستوى البطارية LED 2 أزرق مؤشر مستوى البطارية	تخطي عملية غلي الماء وتوزعها فوراً توزيع تلقائياً	يبب مرتين يبب خمس مرات عند الانتهاء
		الوميض للـ LED الأزرق		الصدى مستمراً بشكل مستمر

قبل الاستخدام لأول مرة:

(A1) قم بفك غطاء الشرب وغطاء الماء ثم قم بتنظيف الكوب وغطاء الكيسولة وداخل خزان الماء باستخدام إسفنجة ناعمة والماء والمنظف. قم بلف غطاء الشرب وغطاء الماء مرة أخرى على الجهاز بعد ان يجف.

ملاحظة هامة: لا تغسل الجسم الرئيسي للجهاز. قم بغسل الكوب وغطاء الكيسولة وداخل خزان الماء فقط.

(A2) أدخل البطارية

الشحن عبر كابل الشحن USB-C (البعض الطرز فقط)

قم بتوصيل كابل الشحن USB-C بالجهاز ثم قم بتوصيل الكابل USB بمحول الطاقة الرئيسي.

يُسمح بوقت الشحن لمدة 2-3 ساعات.
ملاحظة هامة بشأن الشحن: ساهم LED برتقالية بالكامل عندما تكون البطارية مشحونة بنسبة 100%.

استعداداً لتحضير القهوة

(B1) قم بقلب الجهاز رأساً على عقب ثم قم بفك غطاء الشرب وغطاء الكيسولة.

(B2) ضع كيسولة في الجزء الداخلي لغطاء الكيسولة. اضغط الكيسولة حتى تصبح مسطحة.

(B3) قم بلف غطاء الكيسولة وغطاء الشرب على الجهاز.

(B4) قم بإعادة وضع الجهاز بالوضع الصحيح ثم قم بفك غطاء الماء.

(B5) صب الماء حتى وصوله إلى علامة المستوى الأقصى.

(B6) قم بلف غطاء الماء على الجهاز.

الجهاز الآن جاهز لتحضير القهوة.

تحضير القهوة

(B7) استخدم ماء بدرجة حرارة الغرفة للغلي:

أضغط على الزر لمدة 2 ثانية. ستسمع صفيرتين،

وسيواصل مؤشر الضوء داخل الزر وميضه الأحمر. عندما

يصل درجة حرارة الماء إلى درجة حرارة محددة مسبقاً،

سيتحول الجهاز إلى عملية الضغ والاستخلاص. عندما

يتم إعداد الماء الساخن المغلي، يمكنك الضغ

والاستمرار على الزر لمدة 5 ثوان، ستخطى عملية الغلي

ويتم تنشيط تحضير القهوة مباشرة.












(B8) في غضون 4-5 دقائق، ستسمع صفيرتين،

وسيظهر الإضاءة الزرقاء وستكون القهوة جاهزة. قم

بفك غطاء الشرب واستمتع بقهوتك!

(B9) لإيقاف تشغيل الجهاز، اضغط على الزر مرة واحدة. أو

سيتم إيقافه تلقائياً في بضع ثوان معينة.

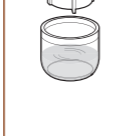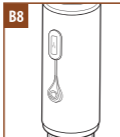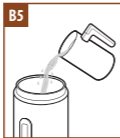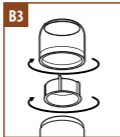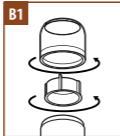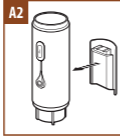

Designed and manufactured by Teqtronix Inc.
All rights reserved.

For more information on warranty,
terms and support log onto our website.

For more information, please contact our
support team info@lepresso.com

 [lepresso_official](https://www.instagram.com/lepresso_official) | www.lepresso.com

Made in China

