

LèPRESSO



HIGH PERFORMANCE COFFEE BEAN GRINDER

EASY ONE-BUTTON OPERATION

MODEL: LPPWGRBK

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Before use check that the voltage of wall outlet correspond to the one shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
4. If the supply cord is damaged it must be replaced by the manufacturer or a authorized service agent or a qualified technician in order to avoid a hazard.
5. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
6. Care shall be taken when handling the cutting blades, emptying the bowl and during cleaning.
7. Do not let cord hang over edge of table or hot surface.
8. Do not immerse the motorized base in liquid, or place in dishwasher. Damage to the unit will occur if submerged in liquid or filling the liquid into the container. Only the top cover may be immersed.
9. Close supervision is necessary when your appliance is being used near children or infirm persons.
10. Ensure fingers are kept well away from moving parts.
11. Do not remove cover until blade has completely stopped.
12. Do not attempt operation without the cover being in place.
13. Do not run the appliance without load.
14. The use of accessory not recommended by the manufacturer may cause injuries to persons.
15. Immediately turn off the appliance and send it to the authorized service agent for repair if abnormal sound, abnormal taste, excessive heat and smoke are found during use.
16. Remove the dust and other foreign objects from the appliance before use.
17. It is forbidden to disassemble, repair and rebuild the body.
18. After each use, ensure that the motor stops completely before disassemble.
19. Do not plug and unplug the appliance with wet hands or wet towels.
20. Do not drag or bind the power cord.
21. Do not shake or drop the appliance strongly.
22. Check grinding chamber for presence of foreign objects before using.
23. This appliance is not intended for used by persons (including children) with

reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.


24. Children should be supervised to ensure that they do not play with the appliance.

25. Misuse may cause potential injury.

26. Do not operate the appliance for other than its intended use.

27. Do not use outdoors.

KNOW YOUR COFFEE GRINDER

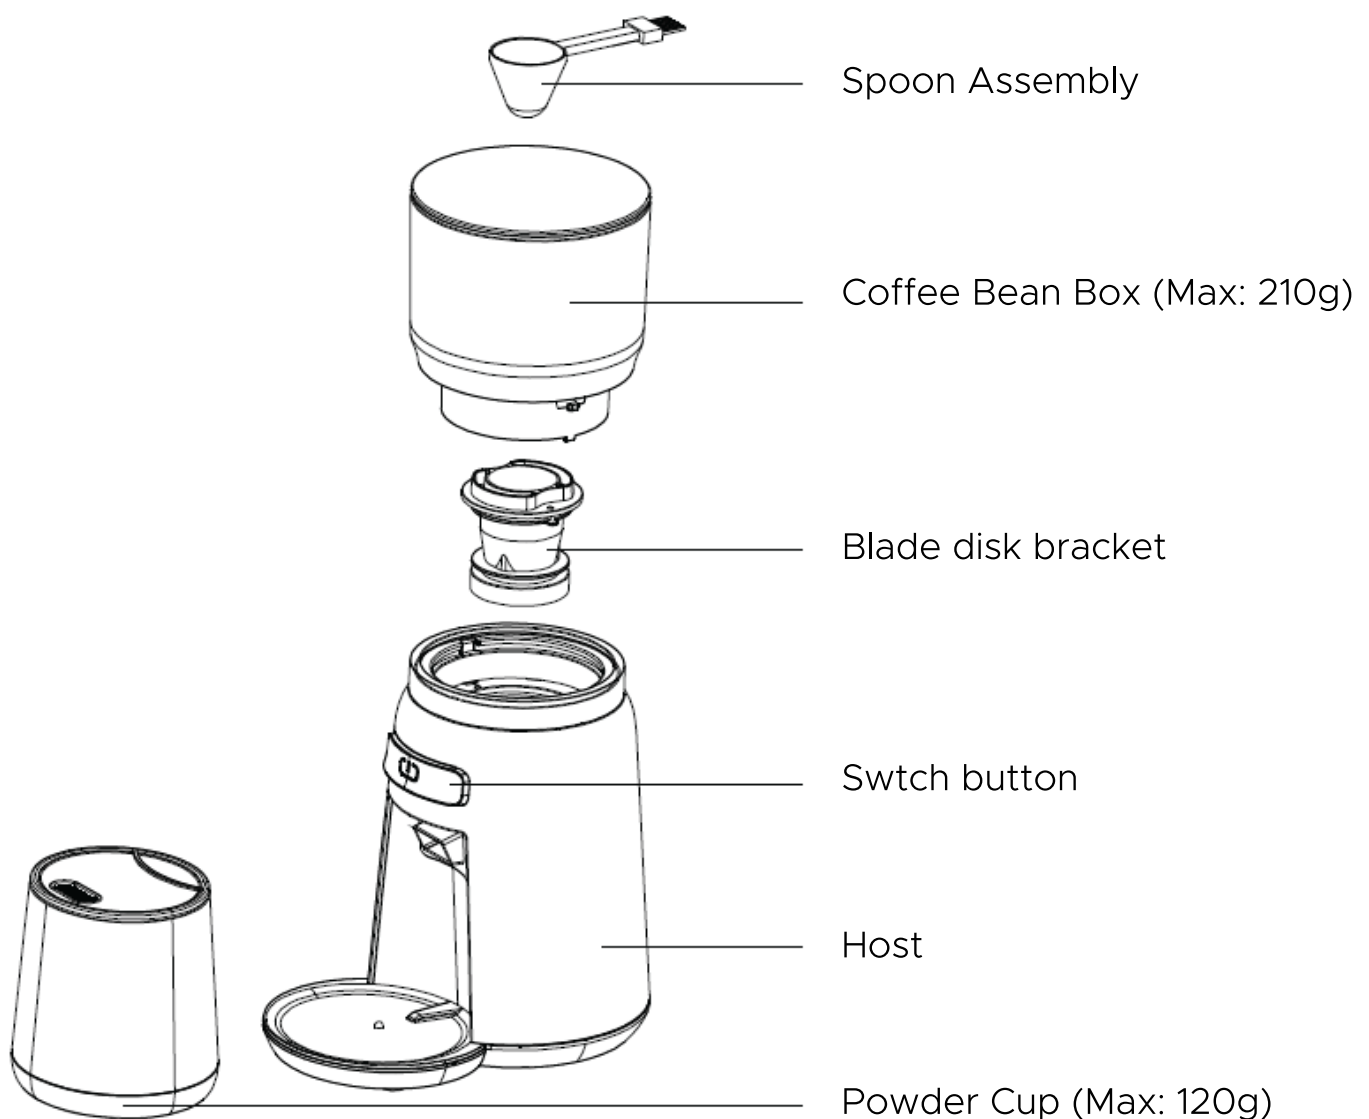

BEFORE THE FIRST TIME

1. Carefully unpack your coffee grinder and remove all packing materials.
2. To remove any dust that may have accumulated during packaging.

CAUTION: Never immerse the body in water for cleaning and do not fill the grinding unit with water for cleaning.

OPERATION

I. BUTTON GRINDER

1. Transfer 210g coffee beans into the coffee box
2. Put the coffee bean box into the card slot and fasten it clockwise
3. Turn on electricity 220-240V 50/60HZ 120W
4. Send the cutterhead bracket into the slot
5. Put the powder cup into the base
6. The thickness of grinding beans can be adjusted according to the pressing time and the time should not exceed 1 minute
7. Release the switch button to stop grinding beans
8. The device can,t work cantinuously for 10 minutes within 10 minues if the working time is more than 3 minutes it must rest for 30 minutes before it can work

GRINDING TIPS

1. The coarse ground coffee is generally used for percolators and coffee urns. Medium ground coffee is used for drip coffee makers and steam-type espresso machines. A fine ground coffee is used for espresso machines with an electric pump.
2. For the freshest, most flavorful coffee, grind only enough for the pot you are making. Coffee beans keep up to 2 months in the freezer in an airtight container and can be ground while still frozen. Coffee grounds left in your grinder can become stale and affect the flavor of freshly ground coffee. Be sure to clean grinding chamber, blades after each use.
3. This grinder can only grind dry, brittle foods. It will not grind anything moist, extremely hard, or gummy such as whole ginger, chocolate, sesame seeds or oily spices such as cinnamon, cloves or nutmeg. Do not grind peanuts or grains such as wheat, rice, barley, or dried corn. Attempting to grind any of these foods may damage the unit. Never use it to chop ice cubes.
4. Freshly ground peppercorns have a strong aroma and taste that may affect the flavor of coffee beans ground afterward. You may want to purchase a separate grinder if you plan to grind peppercorns.

5.The switch of this machine is a button switch. When grinding coffee beans abnormally, the powder cup is still grinding after it is full of powder. If the grinding time lasts for more than 4 minutes, the temperature controller will jump suddenly and power-off protection will occur. At this time, the prototype does not work. In this case, all the beans in the bean box need to be removed, and the powder blocked in the powder outlet channel needs to be dredged with a brush, and then the machine can be used normally after 2 hours

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

LèPRESSO



طاحونة حبوب القهوة ذات أداء عالي
عملية سهلة بزر واحد

MODEL: LPPWGRBK

إجراءات السلامة الهامة

قبل استخدام الجهاز الكهربائي، يجب دائماً اتباع الاحتياطات الأساسية التالية:

١. قراءة جميع التعليمات.
٢. قبل الاستخدام، التحقق من أن جهد المقبس الكهربائي يتطابق مع الجهد المبين على لوحة التصنيف.
٣. عدم تشغيل أي جهاز كهربائي بوصلة أو سلك تالف أو بعد حدوث عطل في الجهاز، أو إسقاطه، أو تلفه بأي طريقة. يرجى إعادة الجهاز إلى أقرب مرفق صيانة معتمد لإجراء الفحص والإصلاح أو الضبط الكهربائي أو الميكانيكي
٤. إذا كان سلك الكهرباء تالفاً، يجب استبداله من قبل الشركة المصنعة أو وكيل الخدمة المعتمد أو فني مؤهل من أجل تجنب حدوث خطر.
٥. قم بفصل الجهاز عن مصدر الكهرباء عند عدم الاستخدام، قبل تركيب أو إزالة الأجزاء، وقبل التنظيف.
٦. يجب أخذ الحيطة عند التعامل مع شفرات القطع، وتفريغ الوعاء، وأثناء التنظيف.
٧. لا تدع السلك يتدلى على حافة الطاولة أو السطح الساخن.
٨. لا تغمر قاعدة الجهاز الكهربائي في السوائل، ولا تضعها في غسالة الأطباق. سيحدث تلف للوحدة إذا تم غمرها في السوائل أو ملء السائل في الوعاء. يمكن غمر الغطاء العلوي فقط.
٩. يتطلب استخدام الجهاز بالقرب من الأطفال أو الأشخاص الضعفاء إشرافاً ومراقبة دقيقة.
١٠. تأكد من أن الأصابع بعيدة تماماً عن الأجزاء المتحركة.
١١. لا تقم بإزالة الغطاء حتى يتوقف الشفرة تماماً.
١٢. لا تحاول تشغيل الجهاز دون وجود الغطاء.
١٣. لا تشغل الجهاز بدون حمولة.
١٤. قد يؤدي استخدام ملحق غير موصى به من قبل الشركة المصنعة إلى إلحاق إصابات بالأشخاص.
١٥. أوقف الجهاز على الفور وأرسله إلى وكيل الخدمة المعتمد للإصلاح إذا تم اكتشاف أي صوت غير طبيعي، طعم غير طبيعي، حرارة مفرطة أو دخان أثناء الاستخدام.
١٦. قم بإزالة الغبار والأجسام الغريبة الأخرى من الجهاز قبل الاستخدام.
١٧. منع تفكيك الجهاز وإصلاحه وإعادة بنائه.
١٨. بعد كل استخدام، تأكد من أن المحرك يتوقف تماماً قبل الفك.
١٩. لا تقم بتوصيل أو فصل الجهاز بأيدي مبللة أو مناشف مبللة.
٢٠. لا تسحب أو تلتف بسلك الطاقة.
٢١. لا تهز أو تسقط الجهاز بشدة.
٢٢. تحقق من وجود أجسام غريبة في غرفة الطحن قبل الاستخدام.
٢٣. هذا الجهاز غير مخصص للاستخدام من قبل أشخاص (بما في ذلك الأطفال) الذين يعانون من

القدرات الجسدية أو الحسية أو العقلية المقلصة، أو عدم وجود الخبرة والمعرفة، ما لم يتم تزويدهم بإشراف أو تعليم بشأن استخدام الأجهزة من قبل شخص مسؤول عن سلامتهم.


٢٤. يجب مراقبة الأطفال لضمان عدم لعبهم بالجهاز.

٢٥. يمكن أن يتسبب سوء الاستخدام في إصابة محتملة.

٢٦. لا تشغل الجهاز لأغراض أخرى غير الاستخدام المقصود.

٢٧. لا تستخدم في الهواء الطلق.

اعرف مطحنة القهوة الخاصة بك

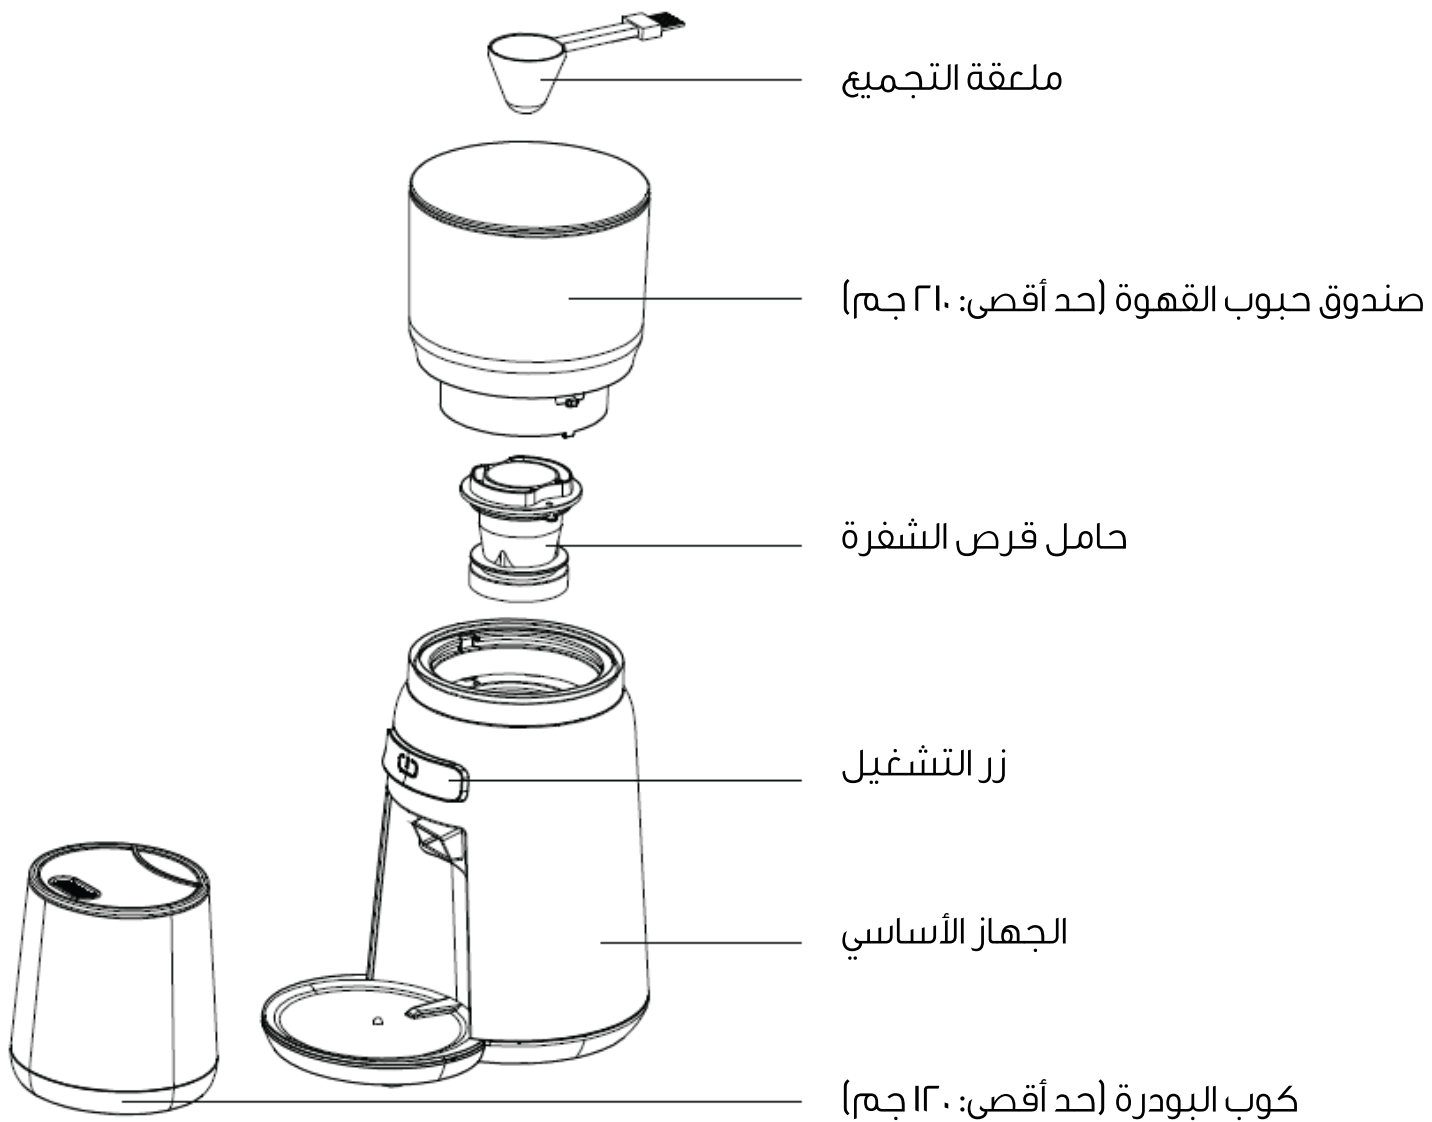

قبل الاستخدام الأول:

١. قم بفك عبوة مطحنة القهوة بعناية وإزالة جميع المواد التعبئة.
٢. لإزالة أي غبار قد تراكم أثناء التعبئة.
- تحذير: لا تغمر الجسم في الماء للتنظيف ولا تملأ وحدة الطحن بالماء للتنظيف.

التشغيل:

١. زر المطحنة:

١. قم بنقل ٢١٠ جرام من حبوب القهوة إلى صندوق القهوة.
٢. ضع صندوق القهوة في فتحة البطاقة وثبته عند عقارب الساعة.
٣. قم بتشغيل الكهرباء بجهد ٢٢٠-٢٤٠ فولت، ٦٠/٥٠ هرتز، ١٢٠ واط.
٤. أدخل حامل الشفرة في الفتحة.
٥. ضع كوب البودرة في القاعدة.
٦. يمكن تعديل سمك حبوب القهوة وفقاً لوقت الضغط، ولا يجب أن يتجاوز الوقت دقيقة واحدة.
٧. قم بتحرير زر التبديل لإيقاف طحن الحبوب.
٨. لا يمكن للجهاز العمل بشكل مستمر لمدة ١٠ دقائق، وإذا استمر الوقت العمل لأكثر من ٣ دقائق، فيجب أن يرتاح لمدة ٣٠ دقيقة قبل أن يتمكن من العمل.

نصائح للطحن:

١. يُستخدم القهوة المطحونة خشنة عادة في أجهزة الترشيح وأجهزة صنع القهوة الكهربائية.
- القهوة المتوسطة المطحونة تستخدم في أجهزة صنع القهوة بالتنقيط وآلات الاسبريسو بنظام البخار. القهوة المطحونة ناعمة تستخدم في آلات الاسبريسو التي تعمل بمضخة كهربائية.
٢. للحصول على قهوة طازجة وذات نكهة مميزة، قم بطحن كمية القهوة اللازمة فقط للوعاء الذي ترغب في صنعه. يمكن حفظ حبوب القهوة في الفريزر لمدة تصل إلى شهرين في وعاء محكم الإغلاق ويمكن طحنها وهي مجمدة. تتأثر نكهة القهوة المطحونة حديثاً بالقهوة المتبقية في غرفة الطحن، لذا تأكد من تنظيف غرفة الطحن والشفرة بعد كل استخدام.
٣. هذا الطاحونة يمكنه طحن الأطعمة الجافة والهشة فقط. لا يمكنه طحن أي شيء رطب أو صلب للغاية أو لزج مثل الزنجبيل الكامل، والشوكولاتة، وبذور السمسم أو التوابل الزيتية مثل القرفة، والقرنفل، وجوزة الطيب. لا تحاول طحن الفول السوداني أو الحبوب مثل القمح والأرز والشعير أو الخزة المجففة. قد يتسبب محاولة طحن أي من هذه الأطعمة في تلف الوحدة. لا تستخدمه أبداً لطحن مكعبات الثلج.
٤. حبوب الفلفل المطحونة حديثاً لها رائحة قوية وطعم قد يؤثر على نكهة حبوب القهوة المطحونة بعدها. قد ترغب في شراء طاحونة منفصلة إذا كن

٥. مفتاح هذا الجهاز هو مفتاح زر. عند طحن حبوب القهوة بشكل غير طبيعي، فإن كوب البودرة ما زال يعمل بعدما يكون مليئاً بالبودرة. إذا استمر وقت الطحن لأكثر من ٤ دقائق، فسيقف جهاز التحكم في الحرارة فجأة وسيحدث توقف الطاقة للحماية. في هذا الوقت، لا يعمل الجهاز بشكل صحيح. في هذه الحالة، يجب إزالة جميع البن في صندوق البن، ويجب تطهير البودرة المسدودة في قناة مخرج البودرة باستخدام فرشاة، وبعد ذلك يمكن استخدام الجهاز بشكل طبيعي بعد مرور ساعتين.

التخلص الصديق للبيئة

يمكنك المساهمة في حماية البيئة!
يرجى أن تتذكر احترام اللوائح المحلية: قدم
الأجهزة الكهربائية التالفة إلى مركز مناسب
للتخلص من النفايات.

