

LèPRESSO



SMART ELECTRIC KETTLE

APP & TOUCH CONTROL


LPTPSKBK

IMPORTANT SAFEGUARDS

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the volt indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home, If this is not the case. Contact our dealer and do not use the kettle.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination repair or adjustment.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
6. Do not place on or near a no gas or electric burner or in a heated oven.
7. Do not operate the appliance without anything in it to avoid damaging the heat elements.
8. Do not touch hot surfaces. Use handles or buttons.
9. Ensure that the kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and prevent damage or injury.
10. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
11. While water is boiling, or just after the water has been boiled, avoid contact with steam from the spout,
12. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
13. Be careful of refilling when the kettle is hot.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
15. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

16. Children shall not play with the appliance.
17. The appliance must not be immersed.
18. The attached base can not be used for other than intended use.
19. Extreme caution must be used when moving an appliance containing hot water.
20. The appliance is not a toy. Do not let the children play it.
21. The kettle is for household use only. Do not use outdoors.
22. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
23. Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
24. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
25. Do not use the appliance for other than intended use.
26. The kettle can only use with the stand provided.
27. If the kettle is overfilled, boiling water may spill out.
28. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
29. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
27. Save these instructions.

KNOW YOUR ELECTRIC KETTLE

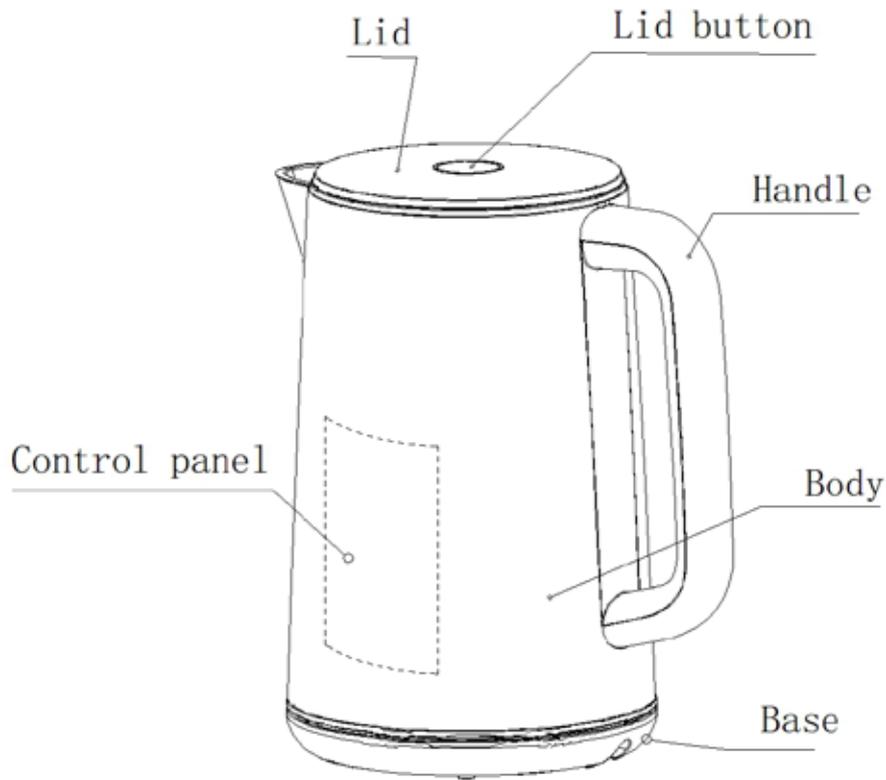

CONTROL PANEL



50 60

70 80

90 Boil

BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling a full kettle of water once and then discarding the water. Wipe the surface with a damp cloth.

NOTE: The maximum capacity of kettle is 1.7L.

OPERATION OF YOUR KETTLE

1. Place the kettle on a flat surface.
2. To fill the kettle, remove it from the Power base and press the Lid-release button to open the kettle lid, then fill the kettle with the desired amount of water and then close the Kettle lid. Alternatively, the kettle may be filled through the spout. The water level should not exceed MAX mark or sit below MIN level. Too little water will result in the switching off of the kettle before the water has boiled.

NOTES:

1. Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the Kettle lid is firmly in place before plugging the power outlet.
2. The Power base can be rotated for 360 degrees to facilitate the power plug to connect to the power source.
3. Put the kettle loaded with water onto the Power base and connect the appliance with power source, then all the indicators turn on and the display shows the real-time water temperature. The indicators of "50*", "60*", "70", "80*", and "90*" illuminate solidly while the indicator of default setting "Boil" flashes, and the appliance is ready for use.

NOTE: All the indicators will turn off and three beeps can be heard as well as the appliance will enter into the standby mode if there is not any operation for 1 minute.

4. Press "4" or "" button to select your desired water temperature. The indicator of the selected water temperature flashes while other indicators illuminate solidly.
5. Press "START/CANCEL" button to activate the appliance, the indicator of selected water temperature illuminates solidly while other indicators turn off, the display shows the real-time water temperature, and the appliance starts to work. When the water is heated to the selected temperature, three beeps can be heard, all the indicators turn off and the appliance enters into the standby mode.
6. After selecting the desired water temperature, if you want to activate the keep-warm function, press the "KEEP WARM*" button, at that time, the indicator of selected temperature setting illuminates solidly while the indicators of other five (5) temperature settings turn off, and the display shows the real-time temperature. And the appliance starts to boil water. When the water is heated to the selected water temperature, three beeps can


be heard, and the appliance enters into the keep-warm mode automatically and will keep warm for 30 minutes. After the keeping warm is completed, three beeps can be heard, all the indicators turn off and the appliance enters into the standby mode.

NOTES:

1. After the temperature is selected, the current temperature can not be set by the “+” or “-” button during the water-brewing process or keep-warm process.
2. After the appliance enters into the working process, it can only exit from the current program by operating the “START/CANCEL” button, while other buttons can not be operated.
3. The display will enter into the sleep mode if there is not any operation within the 30-minute keep-warm process, and the display can be woken up by pressing any button.

CONNECTING WLAN

1. Download “Graffiti Intelligence” from the app store to your phone, register an account, and log in;
2. Connect the kettle to the power supply;
3. Connect your phone to WLAN and turn on Bluetooth on your phone;
4. Connect the kettle to the WLAN as the following steps:

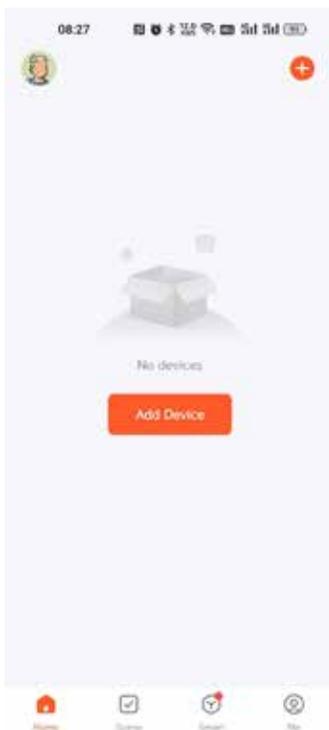


1. Click “Add Device”



2. Wait a moment, and you can see the device has been searched, click “Add”



3. Enter the WLAN password
click “Next”

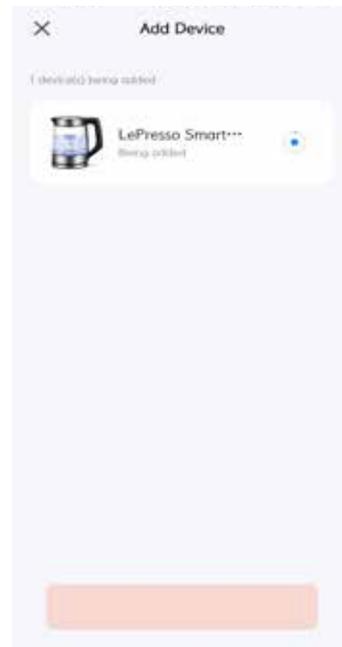

4. Waiting for the connection
to complete



5. Connection completed,
click “Done”



6. After setting is completed, the device can
see that the WLAN indicator on the body
is on.

5. Operating the device through the APP;

6. After setting is completed, if you want to connect to other devices, you can press and hold the “+” and “-” buttons on the body at the same time, and wait until the WLAN indicator turns to slow flashing (flashing once in 2 seconds) to reconfigure the device.

BOIL-DRY PROTECT

Should you accidentally let the kettle operate without water, the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water or before it working again.

CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet and let it cool down before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
2. Wipe the appearance of body with a damp cloth or cleaner, never use a poisonous cleaner.

CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent the gloss loss.


3. When not use or storage, the power cord may be wound under the bottom of kettle.

CLEANING AND MAINTENANCE

Your kettle should be periodically de-scaled as the mineral deposits in tap water may form scale on the bottom of kettle so as to cause the operation less efficiency. You can use the commercially available de-scaler and follow the instructions on the package of de-scaler. Alternatively, you may follow below instructions using the white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then adding water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.
2. Then discard the mixture in the kettle, then filling the kettle with clean water, boiling and then discard the water. Repeat several times until the odor of vinegar has been flushes away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

ENVIRONMENT FRIENDLY DISPOSAL

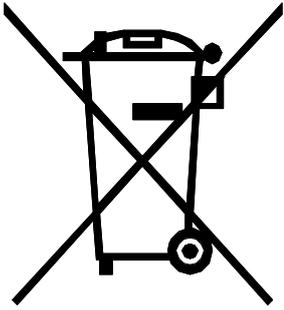

You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.



LèPRESSO



ذكي
غلاية كهربائية
التحكم بالتطبيق واللمس

LPTPSKBK

إجراءات حماية مهمة

١. اقرأ جميع التعليمات قبل الاستخدام.
٢. قبل توصيل الغلاية بمصدر الطاقة، تأكد من أن الفولت المشار إليه على الجهاز (أسفل الغلاية والقاعدة) يتوافق مع الجهد الكهربائي في منزلك، فالأمر ليس كذلك. اتصل بالموزع ولا تستخدم الغلاية
٣. لا تقم بتشغيل أي جهاز بسلك أو قابس تالف أو بعد تعطل الجهاز أو تعرضه للتلف بأي شكل من الأشكال. أعد الجهاز إلى أقرب مركز خدمة معتمد لإصلاح الفحص أو التعديل.
٤. في حالة تلف سلك الإمداد، يجب استبداله من قبل الشركة المصنعة أو وكيل الخدمة التابع لها أو أشخاص مؤهلين بشكل مماثل لتجنب المخاطر.
٥. لا تدع السلك يتدلى على حافة الطاولة أو المنضدة أو يلمس سطحاً ساخناً.
٦. لا تضعه على أو بالقرب من موقد غاز أو كهربائي أو في فرن ساخن.
٧. لا تقم بتشغيل الجهاز دون وجود أي شيء فيه لتجنب إتلاف عناصر الحرارة.
٨. لا تلمس الأسطح الساخنة. استخدم المقابض أو الأزرار.
٩. التأكد من استخدام الغلاية على سطح ثابت ومستو بعيداً عن متناول الأطفال، فهذا سيمنع انقلاب الغلاية ويمنع التلف أو الإصابة.
١٠. للحماية من الحريق أو الصدمة الكهربائية أو الإصابة الشخصية، لا تفعل ذلك اغمر السلك أو المقابس الكهربائية أو الغلاية في الماء أو السوائل الأخرى.
١١. أثناء غليان الماء، أو بعد غليان الماء مباشرة، تجنب ملامسة البخار من الصنبور.
١٢. احرص دائماً على صب الماء المغلي ببطء وحذر دون تحريك الغلاية بسرعة كبيرة.
١٣. احرص على إعادة التعبئة عندما تكون الغلاية ساخنة.
١٤. هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص (بما في ذلك الأطفال) ذوي القدرات البدنية أو الحسية أو العقلية المنخفضة، أو الذين يفتقرون إلى الخبرة والمعرفة، ما لم يتم منحهم الإشراف أو التعليمات المتعلقة باستخدام الأجهزة من قبل شخص مسؤول عنهم. أمان.
١٥. يمكن للأطفال الذين تتراوح أعمارهم بين ٨ سنوات فما فوق استخدام هذا الجهاز إذا تم إعطاؤهم إشرافاً أو تعليمات بشأن استخدام الجهاز بطريقة آمنة وإذا فهموا المخاطر التي ينطوي عليها الأمر. لا يجوز للأطفال إجراء التنظيف وصيانة المستخدم إلا إذا كانوا أكبر من ٨ سنوات وتحت الإشراف. احتفظ بالجهاز وسلوكه بعيداً عن متناول الأطفال الذين تقل أعمارهم عن ٨ سنوات

١٦. لا يجوز للأطفال اللعب بالجهاز.

١٧. لا يجوز غمر الجهاز.

١٨. لا يجوز استخدام القاعدة الملحقة لغير الاستخدام المقصود.

١٩. يجب توخي الحذر الشديد عند تحريك جهاز يحتوي على ماء ساخن

٢٠. الجهاز ليس لعبة. لا تدع الأطفال يلعبون بها.

٢١. الغلاية مخصصة للاستخدام المنزلي فقط. لا تستخدم في الهواء الطلق.

٢٢. قد يؤدي استخدام الملحقات التي لا توصي بها الشركة المصنعة للجهاز إلى نشوب حريق أو صدمة كهربائية أو إصابة شخصية.

٢٣. افصل الغلاية من المنفذ عند عدم استخدامها وقبل التنظيف. اترك الغلاية حتى تبرد قبل تركيب الأجزاء أو خلعها، وقبل تنظيف الجهاز.

٢٤. قم دائماً بتوصيل القابس بالجهاز أولاً، ثم قم بتوصيل السلك بمأخذ الحائط. لفصله، قم بإيقاف تشغيل أي عنصر تحكم، ثم قم بإزالة القابس من مقبس الحائط.

٢٥. لا تستخدم الجهاز لغير الاستخدام المقصود.

٢٦. لا يمكن استخدام الغلاية إلا مع الحامل المرفق.

٢٧. إذا كانت الغلاية ممتلئة أكثر من اللازم، فقد ينسكب الماء المغلي.

٢٨. تأكد دائماً من إغلاق الغطاء ولا ترفعه أثناء غليان الماء. قد يحدث السمت إذا تمت إزالة الغطاء أثناء دورات التخمير.

٢٩. هذا الجهاز مخصص للاستخدام في التطبيقات المنزلية والتطبيقات المشابهة مثل:

- مناطق مطبخ الموظفين في المحلات التجارية والمكاتب وبيئات العمل الأخرى؛


- بيوت المزرعة.

- من قبل العملاء في الفنادق والموتيلات والبيئات السكنية الأخرى؛


- بيئات من نوع المبيت والإفطار.

٢٧. احفظ هذه التعليمات.

تعرف على غلايتك الكهربائية

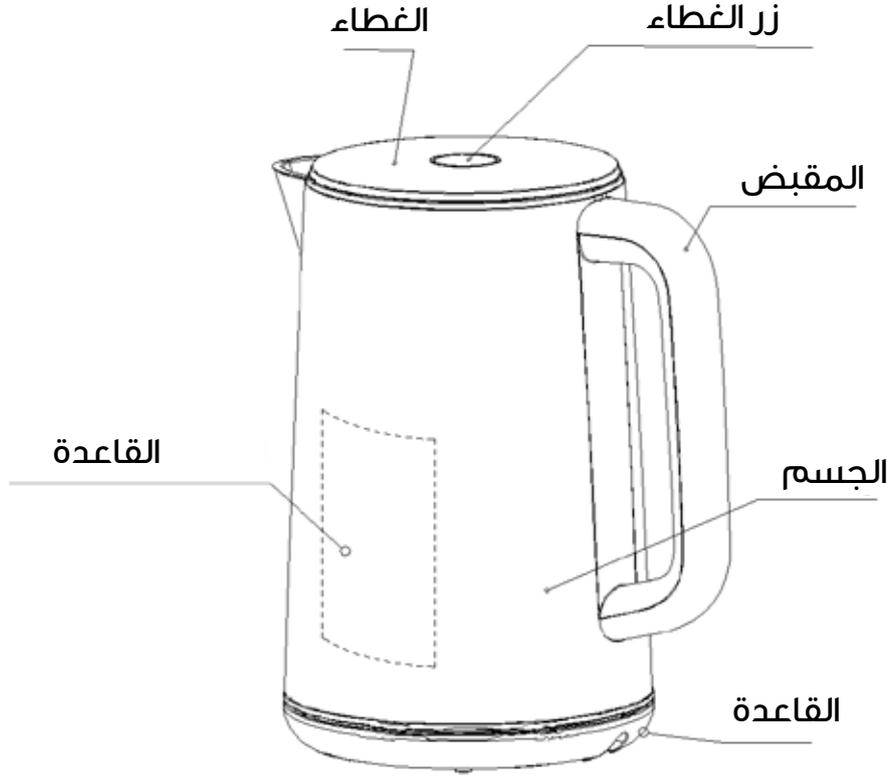

لوحة التحكم

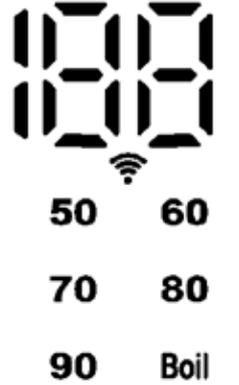

قبل استخدام الغلاية الخاصة بك

إذا كنت تستخدم الغلاية لأول مرة، فمن المستحسن تنظيف الغلاية قبل الاستخدام عن طريق غلي غلاية كاملة من الماء مرة واحدة ثم التخلص من الماء. امسح السطح بقطعة قماش مبللة

تشغيل الغلاية الخاصة بك

١. ضع الغلاية على سطح مستوي.

٢. لملء الغلاية، قم بإزالتها من قاعدة الطاقة واضغط على زر تحرير الغطاء لفتح غطاء الغلاية، ثم املاً الغلاية بالكمية المطلوبة من الماء ثم أغلق غطاء الغلاية. وبدلاً من ذلك، يمكن ملء الغلاية من خلال الصنبور. يجب ألا يتجاوز مستوى الماء علامة MAX أو يكون أقل من مستوى MIN. سيؤدي القليل من الماء إلى إيقاف تشغيل الغلاية قبل غليان الماء

ملحوظات:

١. لا تملأ الماء فوق الحد الأقصى، حيث قد ينسكب الماء من الصنبور عند الغليان. تأكد من تثبيت غطاء الغلاية بإحكام في مكانه قبل توصيل مأخذ الطاقة.

٢. يمكن تدوير قاعدة الطاقة لمدة ٣٦٠ درجة لتسهيل توصيل قابس الطاقة بمصدر الطاقة.

٣. ضع الغلاية المحملة بالماء على قاعدة الطاقة وقم بتوصيل الجهاز بمصدر الطاقة، ثم يتم تشغيل جميع المؤشرات وتعرض الشاشة درجة حرارة الماء في الوقت الحقيقي. تضيء مؤشرات "٥٠ و ٦٠ و ٧٠ و ٨٠ و ٩٠" بقوة بينما يومض مؤشر الإعداد الافتراضي "الغليان"، ويصبح الجهاز جاهزاً للاستخدام.

ملاحظة: سيتم إيقاف تشغيل جميع المؤشرات ويمكن سماع ثلاث أصوات تنبيه وسيدخل الجهاز في وضع الاستعداد إذا لم يكن هناك أي تشغيل لمدة دقيقة واحدة.

٤. اضغط على الزر "E" أو "" لتحديد درجة حرارة الماء المطلوبة. يومض مؤشر درجة حرارة الماء المحدد بينما تضيء المؤشرات الأخرى بقوة.

٥. اضغط على زر "بدء/إلغاء" لتنشيط الجهاز، ويضيء مؤشر درجة حرارة الماء المحدد بقوة بينما تنطفئ المؤشرات الأخرى، وتعرض الشاشة درجة حرارة الماء في الوقت الحقيقي، ويبدأ الجهاز في العمل. عندما يتم تسخين الماء إلى درجة الحرارة المحددة، يمكن سماع ثلاث أصوات تنبيه، وتنطفئ جميع المؤشرات ويدخل الجهاز في وضع الاستعداد.

٦. بعد تحديد درجة حرارة الماء المطلوبة، إذا كنت ترغب في تنشيط وظيفة الاحتفاظ بالرغبة، فاضغط على زر "KEEP WARM*"، وفي ذلك الوقت، يضيء مؤشر إعداد درجة الحرارة المحددة بقوة بينما تضيء مؤشرات درجات الحرارة الخمسة (٥) الأخرى يتم إيقاف تشغيل الإعدادات، وتعرض الشاشة درجة الحرارة في الوقت الفعلي، ويبدأ الجهاز في غلي الماء، وعندما يتم تسخين الماء إلى درجة حرارة الماء المحددة، يمكن سماع ثلاث أصوات تنبيه، ويدخل الجهاز في وضع الحفاظ على الدفء تلقائياً وسيظل دافئاً لمدة ٣٠ دقيقة. بعد اكتمال عملية الحفاظ على الدفء، يمكن سماع ثلاث أصوات تنبيه، وتنطفئ جميع المؤشرات ويدخل الجهاز في وضع الاستعداد.

ملحوظات:

١. بعد تحديد درجة الحرارة، لا يمكن ضبط درجة الحرارة الحالية بواسطة الزر "+" أو "-" أثناء عملية تخمير الماء أو عملية الحفاظ على الدفء.

٢. بعد دخول الجهاز في عملية العمل، لا يمكنه الخروج من البرنامج الحالي إلا عن طريق تشغيل زر "بدء/إلغاء"، بينما لا يمكن تشغيل الأزرار الأخرى.

٣. سوف تدخل الشاشة في وضع السكون إذا لم يكن هناك أي عملية خلال عملية الحفاظ على الدفء لمدة ٣٠ دقيقة، ويمكن إيقاظ الشاشة بالضغط على أي زر.


توصيل الشبكة المحلية اللاسلكية

١. قم بتنزيل "GRAFFITI INTELLIGENCE" من متجر التطبيقات على هاتفك، وقم بتسجيل حساب، ثم قم بتسجيل الدخول

٢. قم بتوصيل الغلاية بمصدر الطاقة

٣. قم بتوصيل هاتفك بشبكة WLAN وقم بتشغيل BLUETOOTH على هاتفك


٤. قم بتوصيل الغلاية بشبكة WLAN باتباع الخطوات التالية:

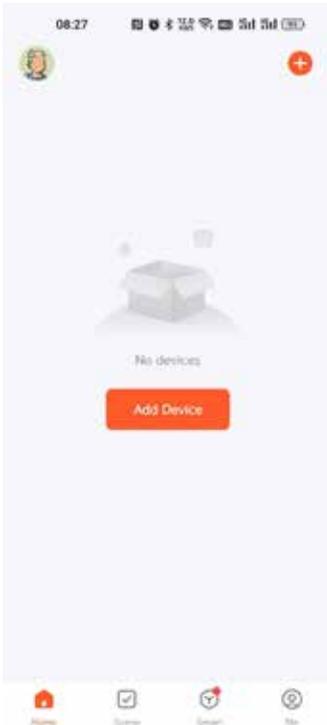

٢. انتظر لحظة، وسترى أنه تم

البحث في الجهاز، انقر فوق "إضافة"

١. انقر فوق "إضافة جهاز"

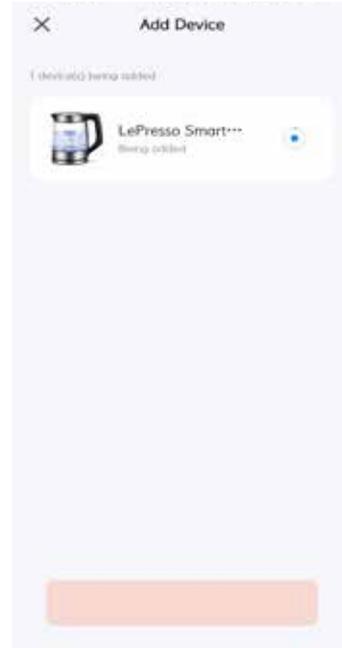

٣. أدخل كلمة مرور شبكة WLAN،
ثم انقر فوق "التالي"

٤. في انتظار اكتمال الاتصال



٥. اكتمل الاتصال، انقر فوق "تم"

٦. بعد اكتمال الإعداد، يمكن للجهاز أن يرى أن
مؤشر WLAN الموجود على الجسم قيد التشغيل.

٥. تشغيل الجهاز من خلال التطبيق

٦. بعد اكتمال الإعداد، إذا كنت تريد الاتصال بأجهزة أخرى، فيمكنك الضغط مع الاستمرار على
الزرين "+" و "-" الموجودين على الجسم في نفس الوقت، والانتظار حتى يتحول مؤشر WLAN إلى
وميض بطيء (وميض) مرة كل ثانيتين) لإعادة تكوين الجهاز.

حماية من الغليان والجفاف

في حالة ترك الغلاية تعمل بدون ماء عن طريق الخطأ، فإن نظام الحماية من الغليان الجاف سوف يقوم بإيقاف تشغيل الطاقة تلقائيًا. إذا حدث ذلك، اترك الغلاية حتى تبرد قبل ملئها بالماء البارد أو قبل أن تعمل مرة أخرى.

التنظيف والصيانة

قم دائمًا بفصل الجهاز عن مأخذ الطاقة واتركه يبرد قبل التنظيف.

١. لا تغمر الغلاية أو سلك الطاقة أو قاعدة الطاقة في الماء أبدًا، أو تسمح للرطوبة بالتلامس مع هذه الأجزاء.

٢. امسح مظهر الجسم بقطعة قماش مبللة أو منظف، ولا تستخدم أبدًا منظفًا سامًا.

تنبيه: لا تستخدم المنظفات الكيميائية أو الفولاذية أو الخشبية أو الكاشطة لتنظيف الجزء الخارجي من الغلاية لمنع فقدان اللمعان.

٣. عند عدم الاستخدام أو التخزين، قد يكون سلك الطاقة ملفوفًا أسفل الجزء السفلي من الغلاية.

التنظيف والصيانة

يجب إزالة الترسبات الكلسية من الغلاية بشكل دوري لأن الرواسب المعدنية الموجودة في ماء الصنبور قد تشكل ترسبات على الجزء السفلي من الغلاية مما يؤدي إلى تقليل كفاءة التشغيل. يمكنك استخدام مزيل الترسبات المتوفر تجاريًا واتباع الإرشادات الموجودة على عبوة مزيل الترسبات. بدلا من ذلك، يمكنك اتباع التعليمات أدناه باستخدام الخل الأبيض.

١. املأ الغلاية بثلاثة أكواب من الخل الأبيض، ثم أضف الماء إليها

الكمية بحيث تغطي الجزء السفلي من الغلاية بالكامل. اترك المحلول في الغلاية طوال الليل.

٢. ثم تخلص من الخليط في الغلاية، ثم املأ الغلاية بالماء النظيف، ثم غليها ثم تخلص من الماء. كرر ذلك عدة مرات حتى تختفي رائحة الخل. يمكن إزالة أي بقع متبقية داخل الصنبور عن طريق فركه بقطعة قماش مبللة

التخلص منها صديق للبيئة

يمكنك المساعدة في حماية البيئة! يرجى تذكر احترام اللوائح المحلية:
قم بتسليم المعدات الكهربائية غير العاملة إلى مركز التخلص من
النفايات المناسب...

